

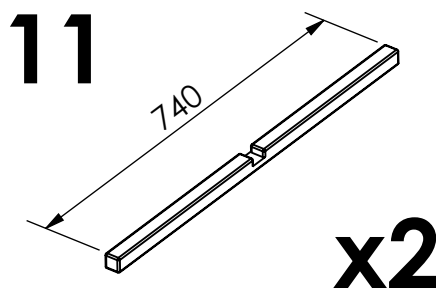
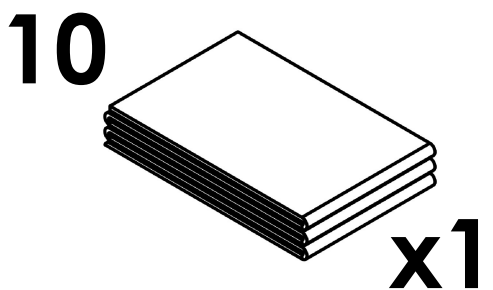
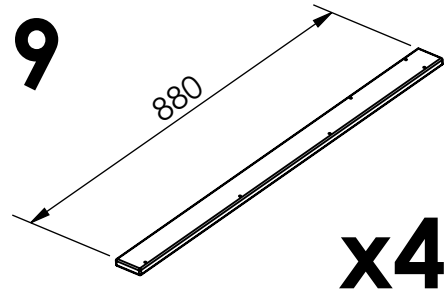
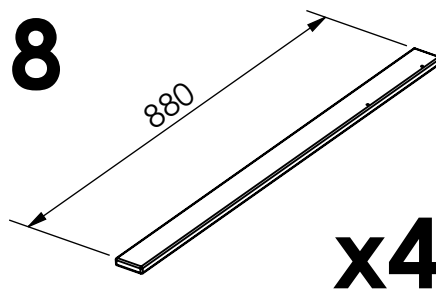
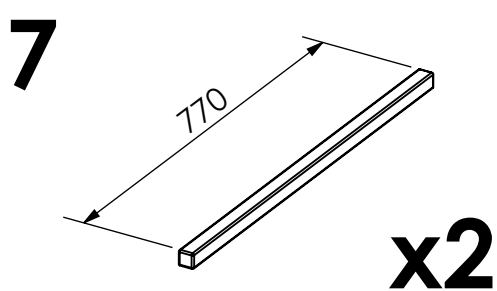
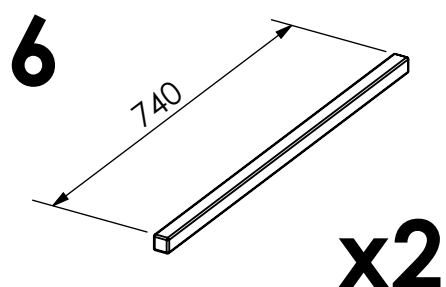
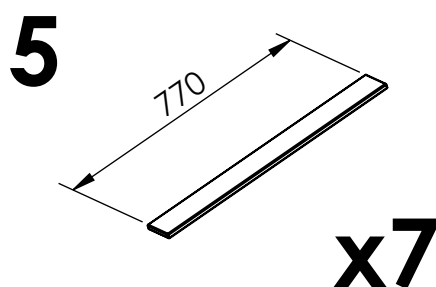
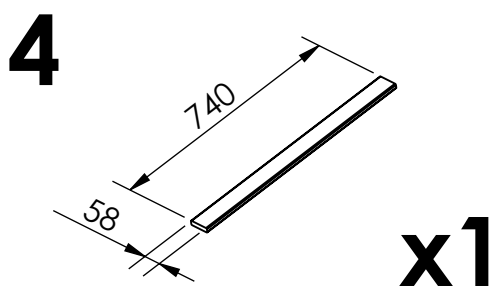
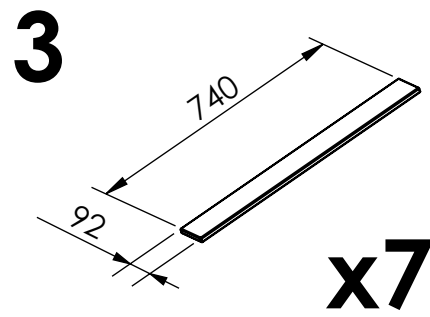
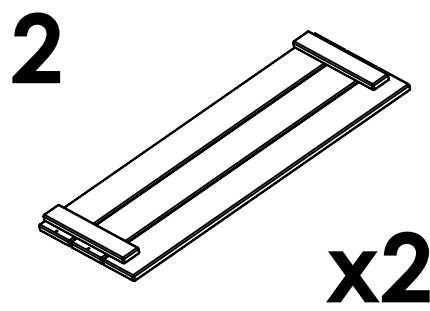
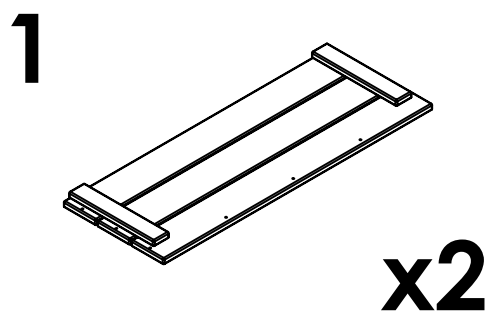
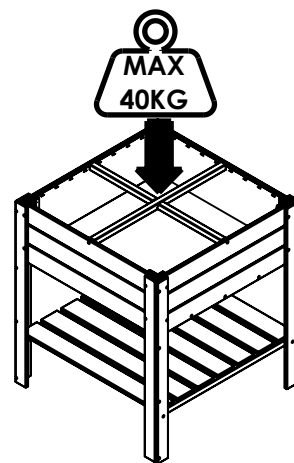







253394



A		3.5x40	x54
B		1.8x30-38	x60

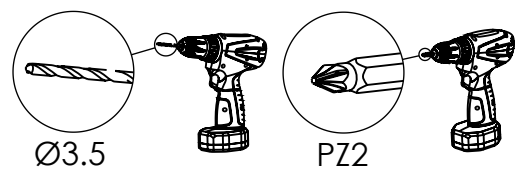


1

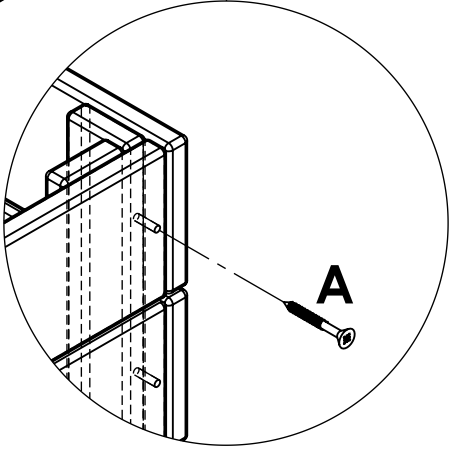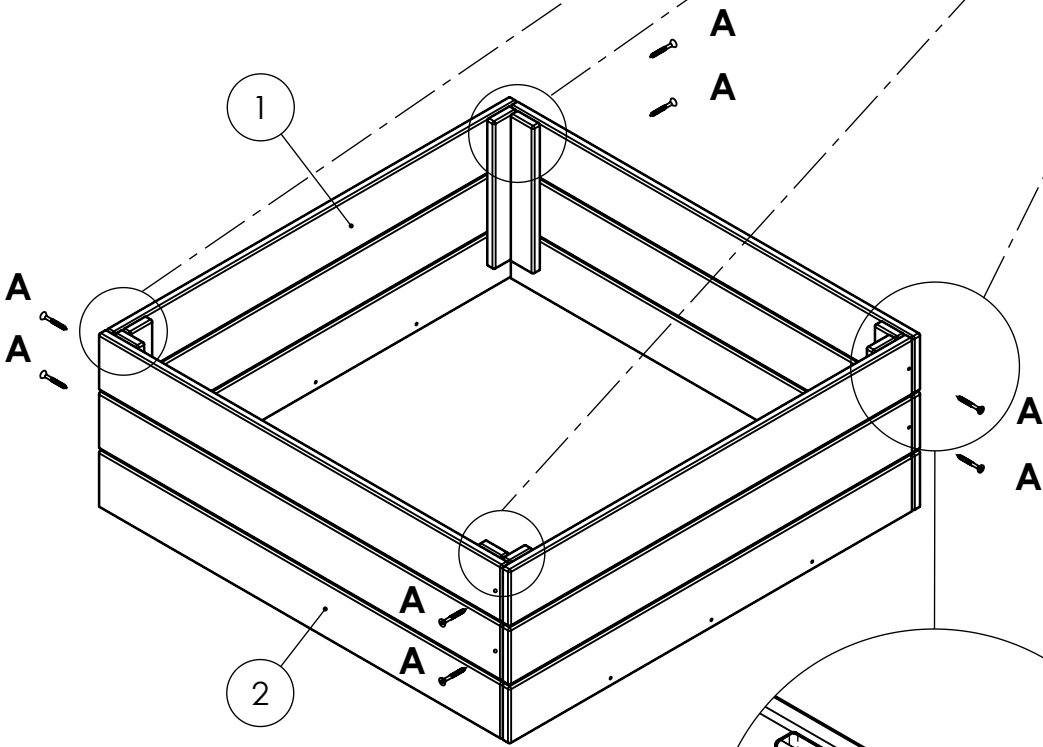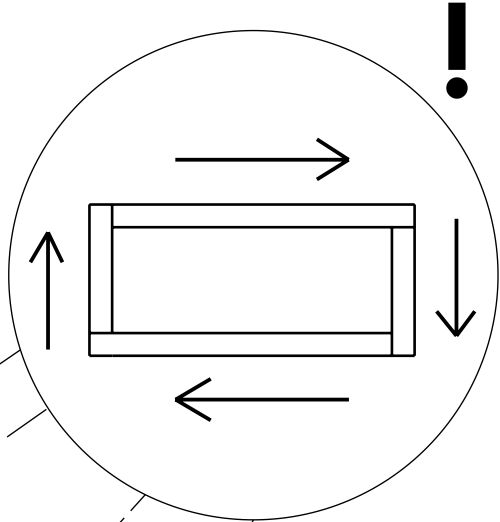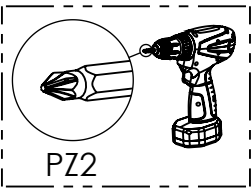


A		3.5x40	x8
---	---	--------	----

2.1

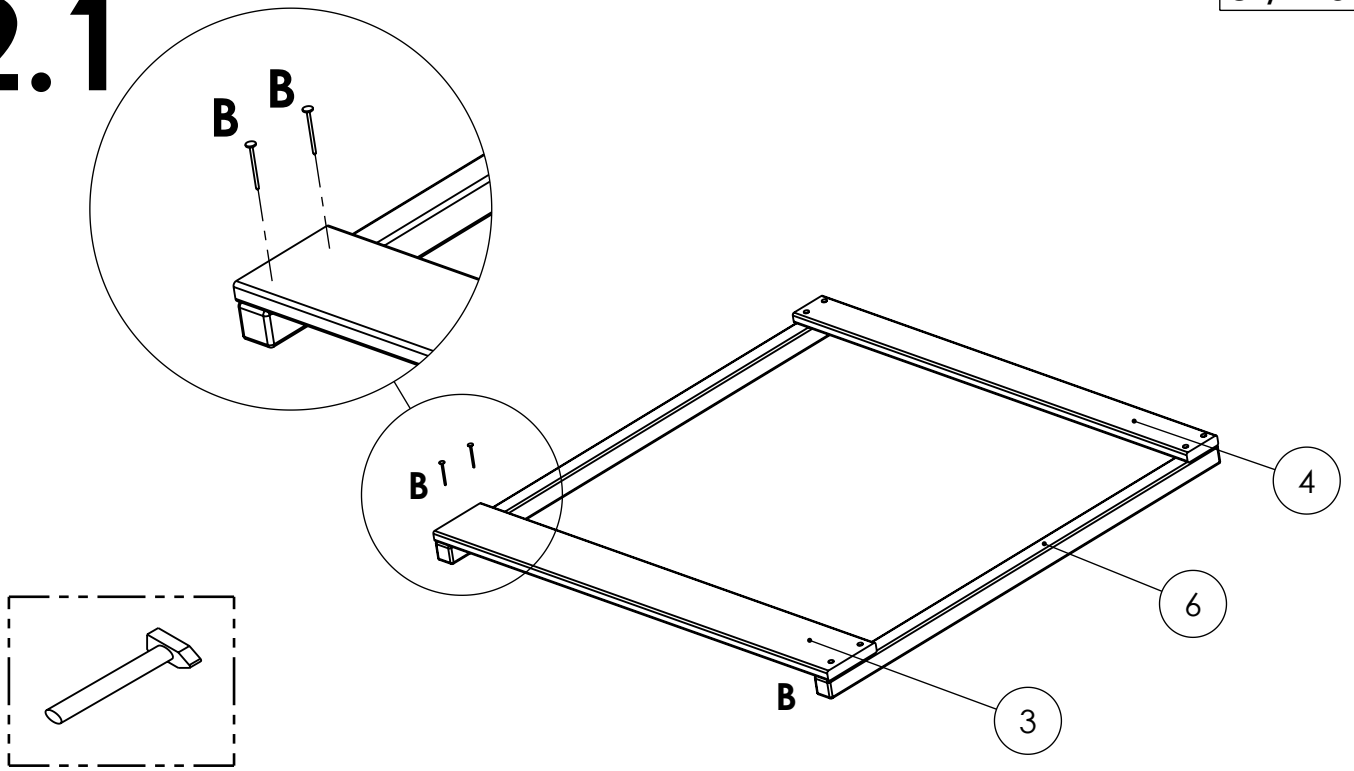


2.2

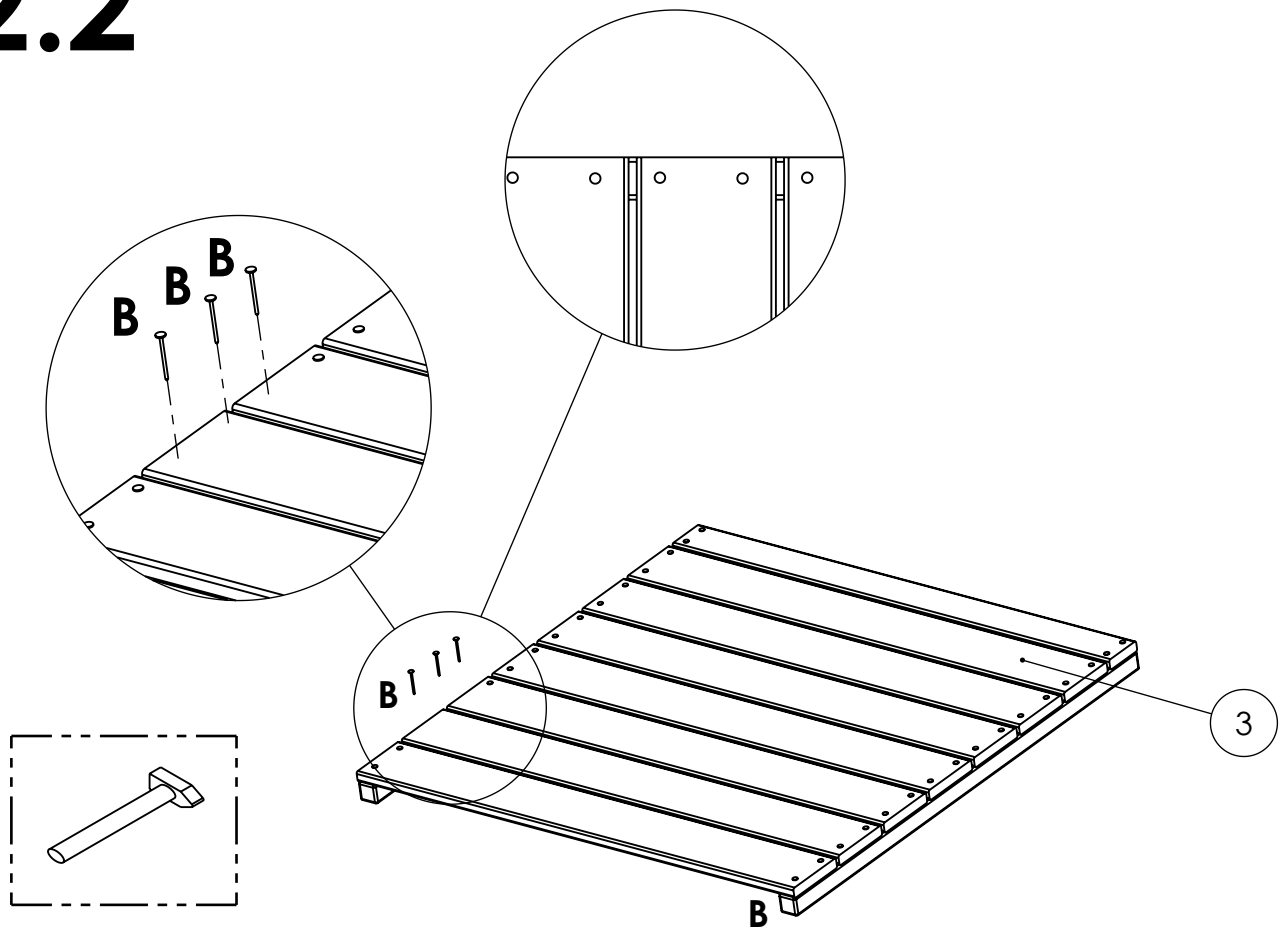


B		1.8x30-38	x32
---	---	-----------	-----

3

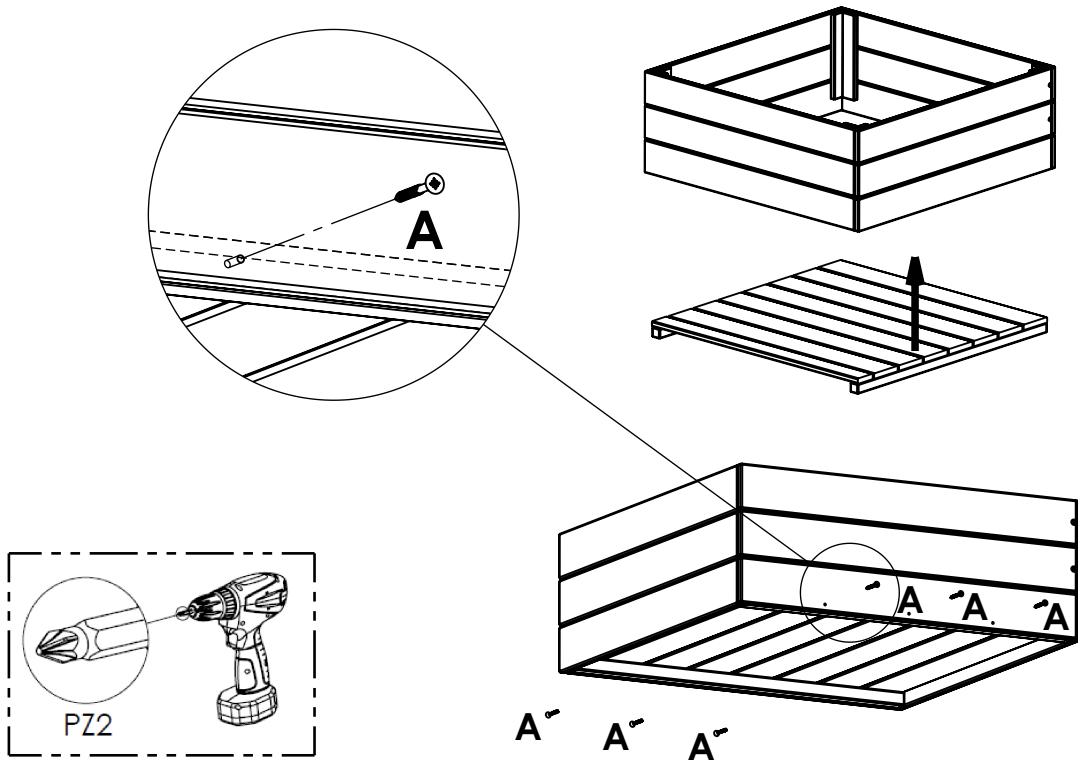




A		3.5x40	x6
---	--	--------	----

4

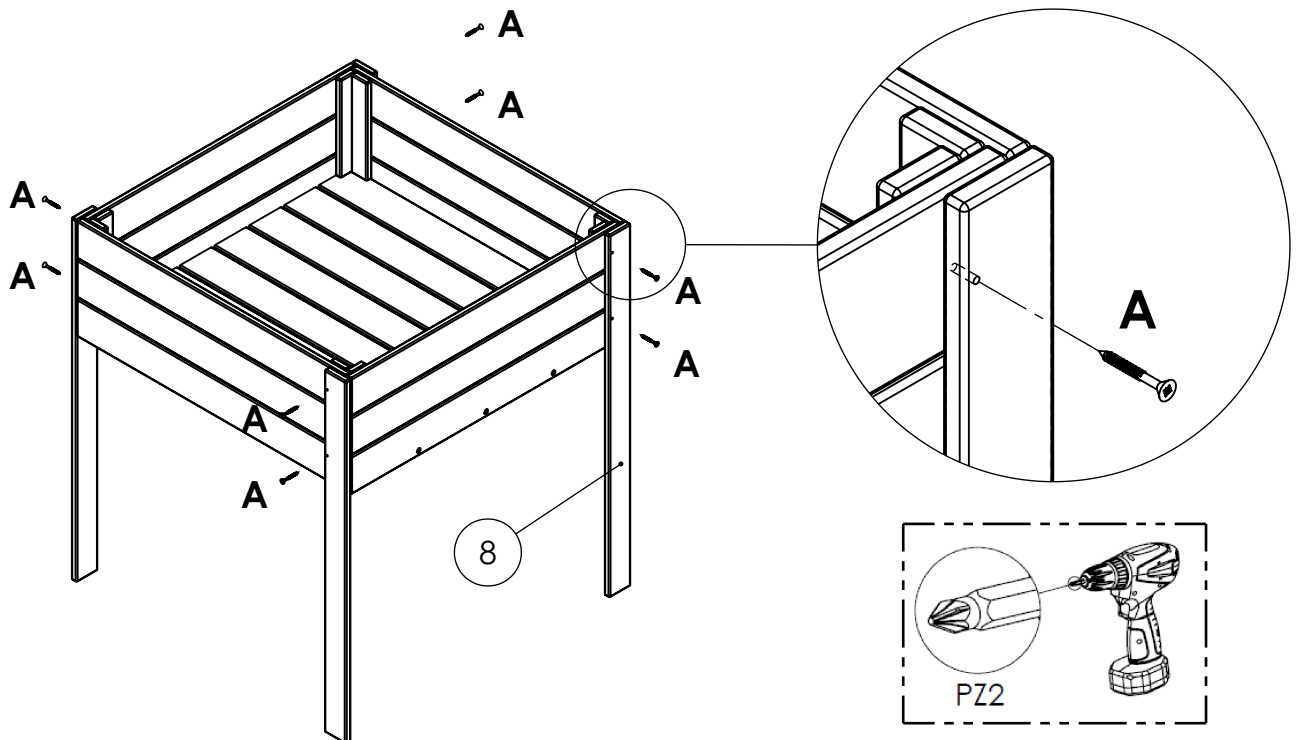





A		3.5x40	x8
---	---	--------	----

5

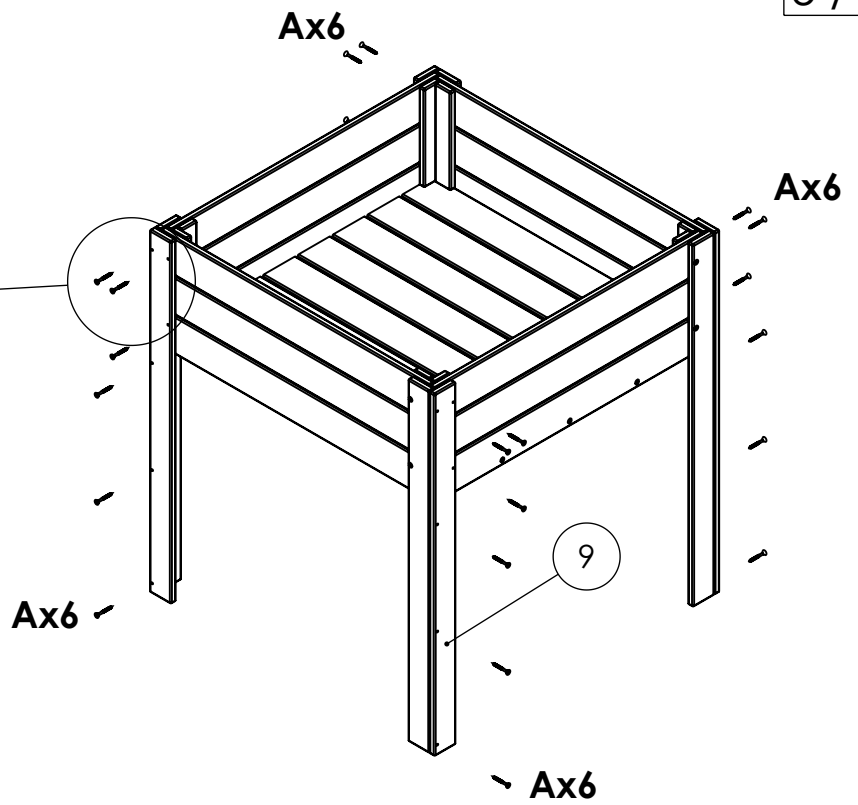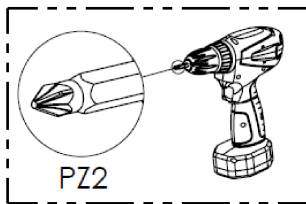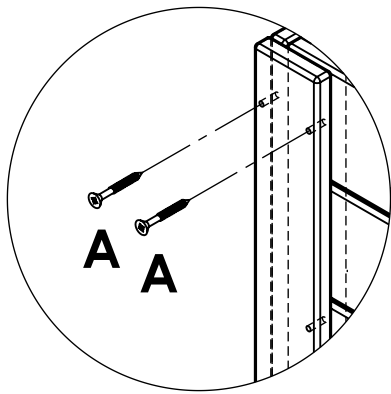



A		3.5x40	x24
---	---	--------	-----

6.1

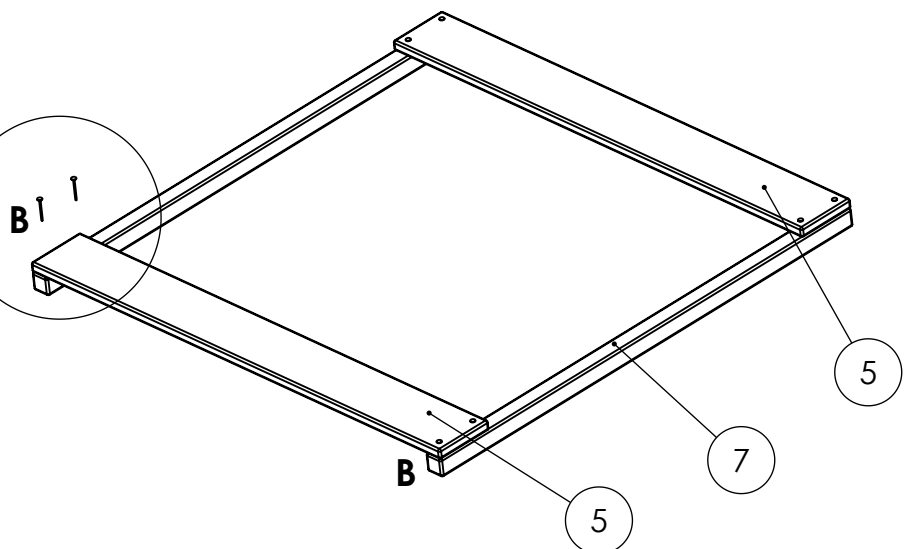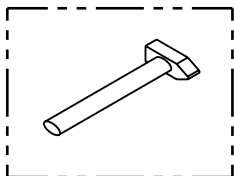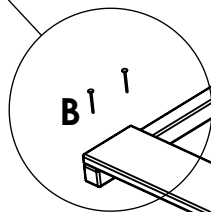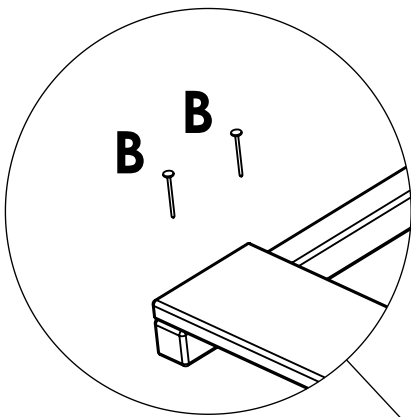


6.2

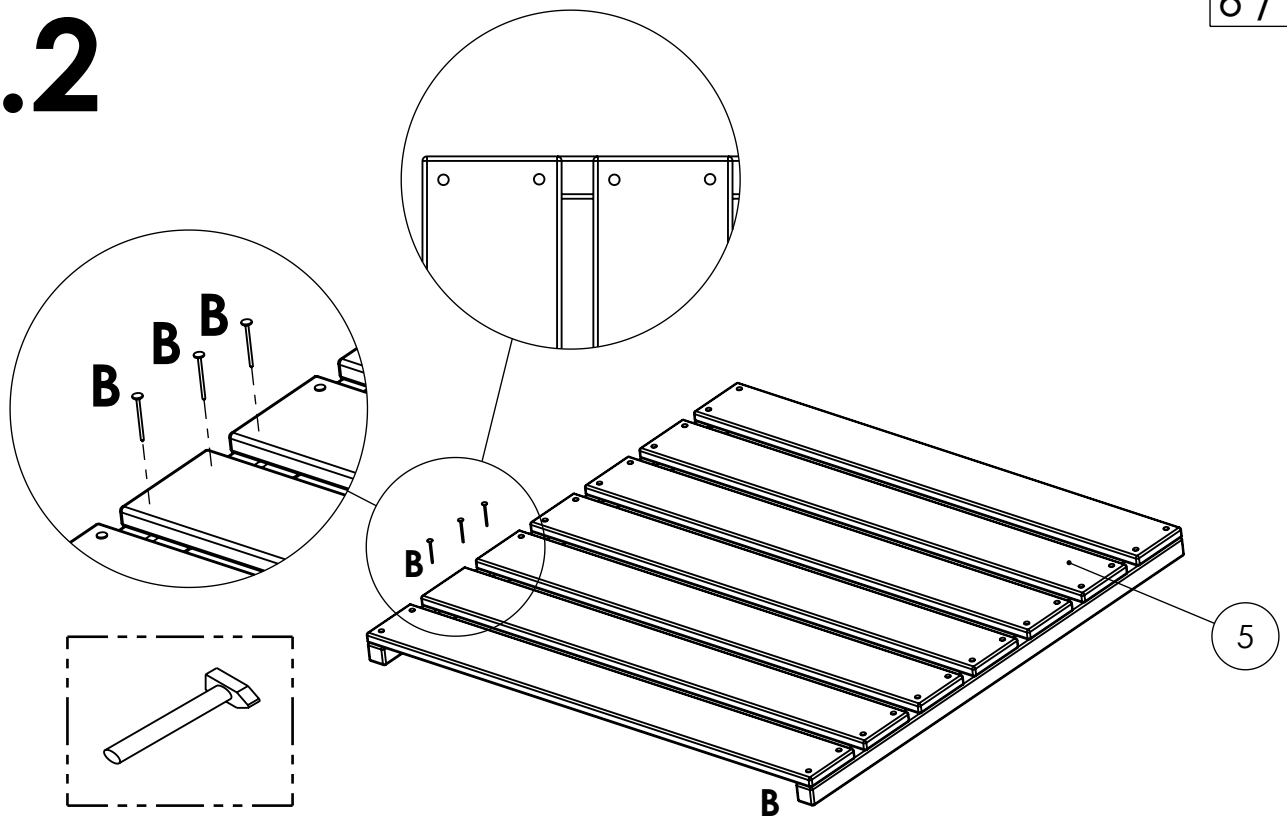




B		1.8x30-38	x28
---	---	-----------	-----

7.1

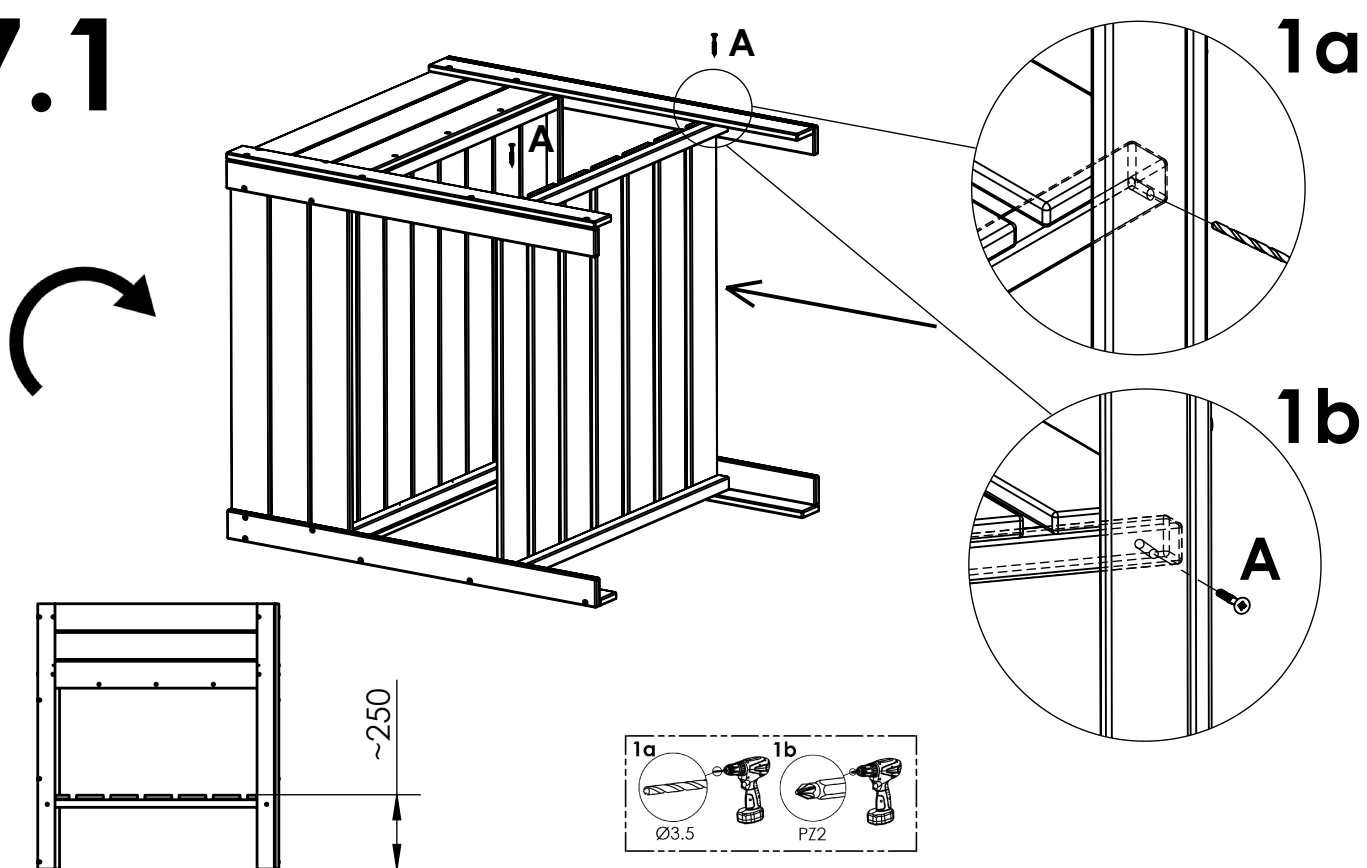




A		3.5x40	x2
---	---	--------	----

7.2

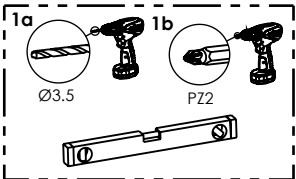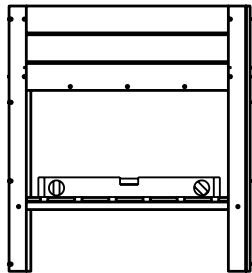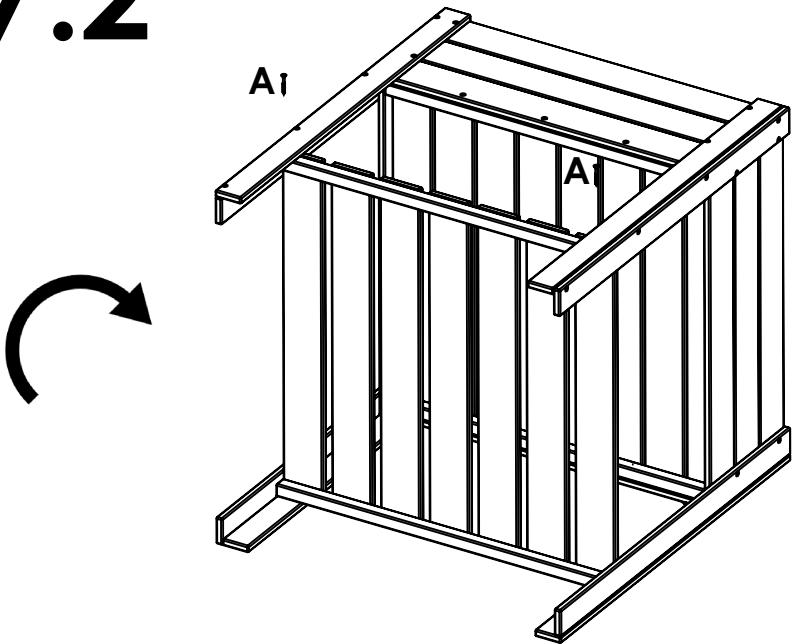


A		3.5x40	x2
---	---	--------	----

8

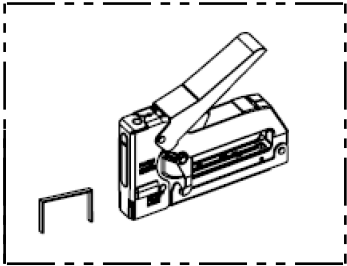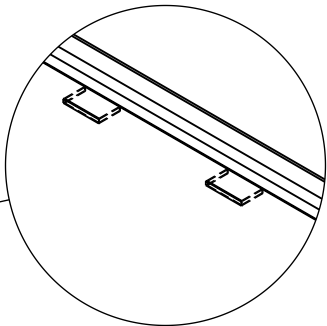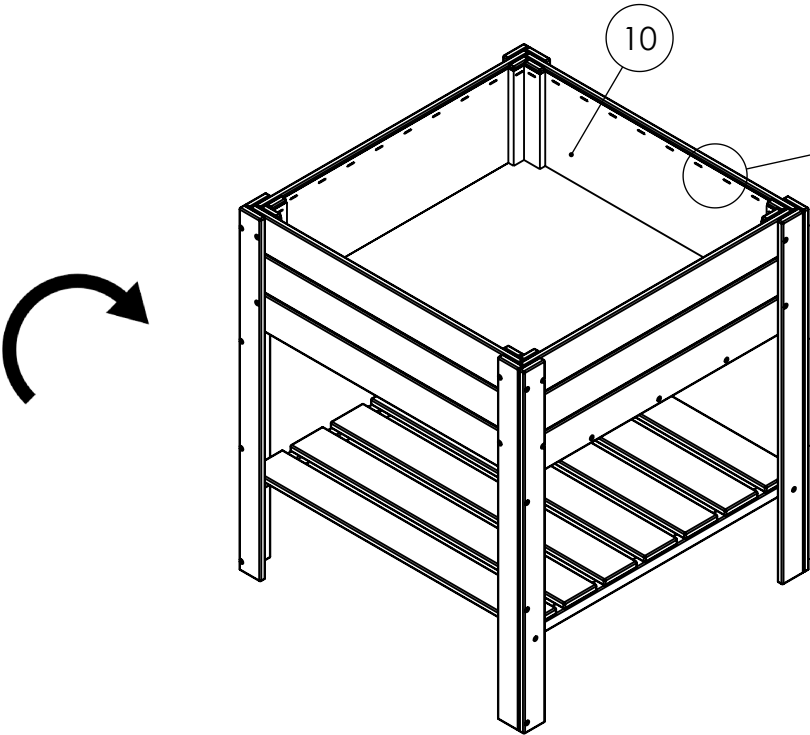

9

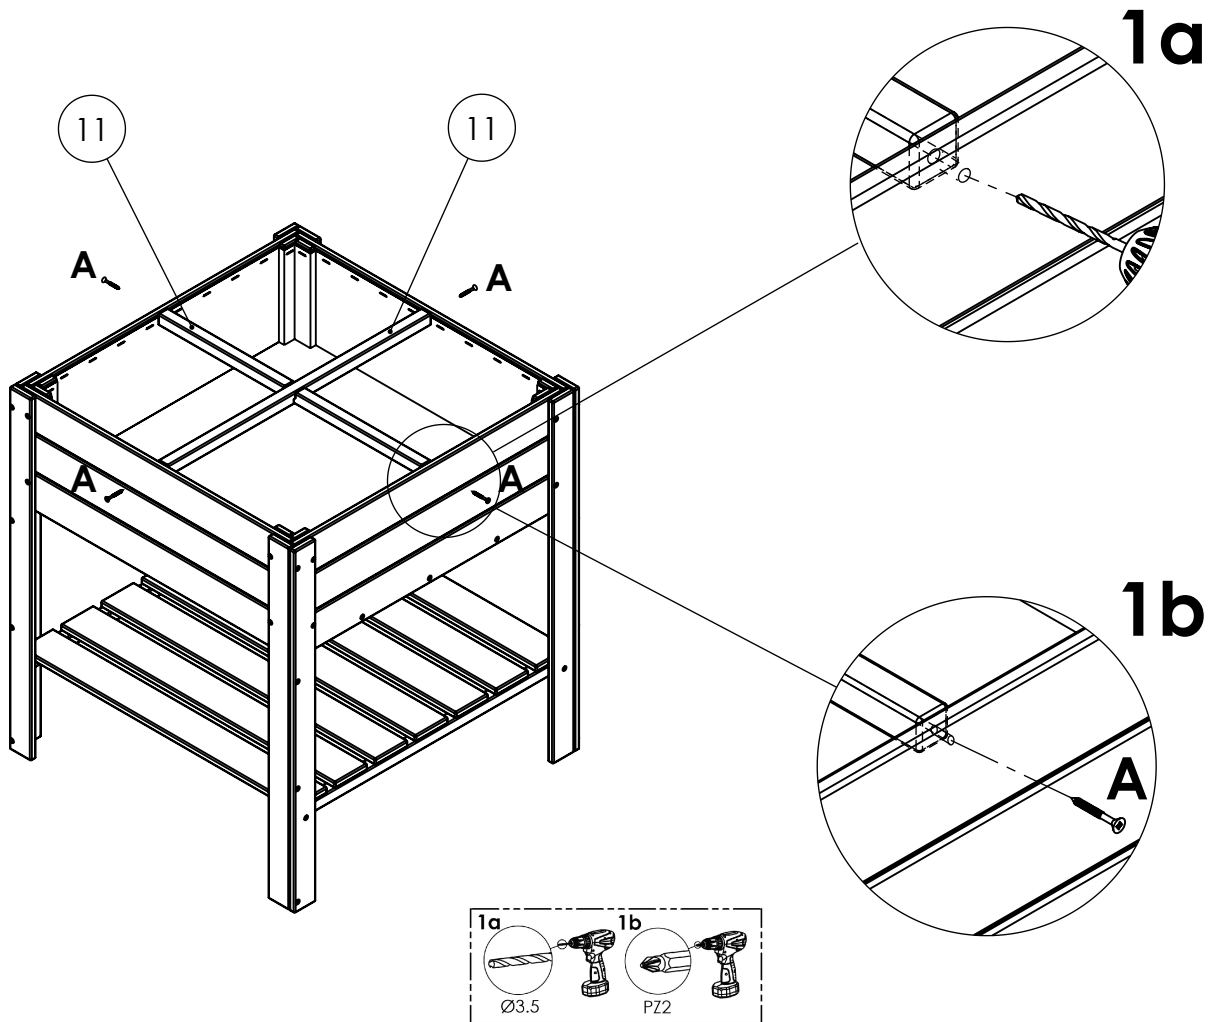

A		3,5x40	x4
---	---	--------	----

Děkujeme vám za zakoupení našeho výrobku!

Prečtěte si pozorně tento návod a uschovejte si ho pro budoucí použití.

Distributor: ASKO a.s., Fr.Diviše 984, 10400, Praha 10, ČESKÁ REPUBLIKA

Bezpečnost. Jen pro domácí použití. Výrobek používejte a montáž provádějte vždy na pevné a rovné ploše. Konstrukci výrobku pravidelně kontrolujte a nepoužívejte ho, máte-li pochybnosti o jeho vhodnosti pro daný účel. Nesedejte a nestoupejte si na výrobek ani žádnou jeho část. Montáž tohoto nábytku musí provádět kompetentní dospělá osoba.

Při montáži utáhněte všechny šrouby a matice jen volně. Dotáhněte je až na konci montáže po sestavení všech dílů. Nezapomeňte výrobek připevnit k zemi nebo podloží, aby byl chráněn před silným větrem a neočekávanými bouřkami. Lehčí výrobky včetně zahradních kůlen s tloušťkou prken 12–19 mm může odfouknout silný vítr, pokud nejsou zajištěny.

Na začátku sezóny. Zkontrolujte, jestli jsou všechny součásti a kování výrobku pevné, a nepoužívejte ho, máte-li pochybnosti o jeho vhodnosti pro daný účel. **Na konci sezóny.** Během dlouhotrvajícího nepříznivého počasí (mokro nebo chlad) a v zimě tento výrobek skladujte pod střechou (nejlépe v kůlně nebo garáži). Před skladováním vždy výrobek umyjte a osušte. **Jak pečovat o dřevěné povrchy** Dřevo je přírodní materiál, který degeneruje, pokud je umístěn venku. Dřevo je třeba pravidelně impregnovat a ošetřovat. O radu můžete požádat v místním obchodě pro kutily.

Péče o nábytek a jeho údržba

Umývejte jemným mýdlovým roztokem. Osušte čistou a suchou látkou. Prečtěte si tento návod, abyste mohli svůj výrobek využívat naplno.

Upozorňujeme, že záruka kvality společnosti je platná jen v případě, že budete pečlivě dodržovat tento návod k údržbě.

Měli byste vědět:

Impregnované výrobky mohou pouštět barvu. Po krátké době to ustane. Barva tlakově impregnovaných výrobků se může prkno od prkna lišit a může být světlejší nebo tmavší než barva na štítcích či fotografiích. Je to přirozená vlastnost dřeva a je to zcela běžné.

Výrobek může postupně vlivem impregnačních solí a někdy plísně ztrácet barvu.

Vakuově impregnované výrobky

OŠETŘENÉ DŘEVO OBSAHUJÍCÍ BIOCIDNÍ PŘÍPRAVEK

Dřevo ošetřené přípravkem Celcure® C65 je chráněno před dřevokazným hmyzem a houbami.

Aktivní složky: zásaditý uhličitán mědnatý, didecyldimethylamonium chlorid a didecyldimethylamonium karbonát.

Barvené výrobky

PROTIM AQUATAN ES5 je barevný koncentrát na vodní bázi, který se ředí vodou. Je to dekorativní povrchový nátěr na dřevo. Dřevo ošetřené přípravkem Protim Aquatan ES5 není chráněno před dřevokazným hmyzem a houbami. Na ochranu před těmito organismy je třeba ochranný nátěr. Aktivní složky: 3-jod-2-propynyl butylkarbamát, propikonazol.

Ošetřená prkna, která již nejsou použitelná, lze zlikvidovat v souladu se státními a místními předpisy.

Výrobek na celý život

Naše výrobky vyrábíme z odolné severské borovice a smrku. Při správné údržbě vydrží naše pikniková lavice se stolem po dobu, za kterou vyroste nový strom.

Jak zachovat krásu výrobku na mnoho let?

Výrobek vždy umývejte jemným mýdlovým roztokem a osušte čistou a suchou látkou. Pokud na něj vylijete tekutinu, vždy ji co nejrychleji utřete.

Pokud nebudete výrobek natírat, začne šednout bez ohledu na to, jakou měl při zakoupení barvu. Patří to k přirozené kráse dřeva, které ukazuje, jak stárne a mění se i poté, co z něj něco vyrobíme. Výrobek můžete natírat nebo jinak ošetřovat – v nejbližší maloobchodní prodejně vám poradí nejvhodnější nátěr nebo přípravek na ošetření dřeva.

Pokud jste zakoupili **natřený výrobek**, první údržba bude potřeba v závislosti na povětrnostních podmínkách až za 3–5 let. Interval údržby závisí na povětrnostních podmínkách a umístění výrobku. Kovové díly výrobku pravidelně promazávejte. Promazávejte je nejméně jednou ročně nebo podle potřeby. Pokud jste zakoupili **mořený výrobek**, první údržba bude potřeba v závislosti na povětrnostních podmínkách za 1–2 roky. Interval údržby závisí na povětrnostních podmínkách a umístění výrobku. Mořené výrobky nejsou chráněny před dřevokazným hmyzem a houbami. Mořidlo neproniká dovnitř dřeva a v závislosti na povětrnostních podmínkách se může z rovných povrchů výrobků smývat. Pokud k tomu dojde, poraďte se v nejbližším obchodě pro kutily ohledně dalšího domácího ošetření výrobku.

Pokud jste zakoupili **neošetřený (přírodní) výrobek**, ošetřete jeho povrch při instalaci antiseptickým, protiplísňovým přípravkem. Poradte se v nejbližším obchodě pro kutily ohledně dostupných přípravků na ošetření dřeva. Další ošetření výrobku závisí na způsobu jeho prvního ošetření. Přípravek na ošetření dřeva nebo nátěr je třeba nanášet na jednotlivé díly samostatně. Pokud natíráte nebo ošetřujete desku vyrobenou v továrně jakoukoli jinou barvou, upozorňujeme, že se během sušení objeví nenatřené části dřeva. Nelze to považovat za důvod k reklamaci. V průběhu času se na zakoupených přírodních výrobcích i navzdory domácímu ošetření může objevit plíseň.

Kovové díly výrobku pravidelně promazávejte. Promazávejte je nejméně jednou ročně nebo podle potřeby.

Tipy

Montáž

Montáž proveďte podle návodu dodaného s výrobkem.

Výrobek vždy montujte na rovném povrchu a řiďte se návodem. **Při montáži šrouby nejdříve utáhněte jen volně a dotáhněte je až po kompletní montáži.** Nejméně jednou ročně kontrolujte kování nábytku – šrouby možná bude třeba dotahovat.

Skladování

Dřevěné venkovní výrobky mějte pod střechou. Prodloužte tím jejich životnost. V případě, že nábytek necháváte venku napospas povětrnostním vlivům a není pod střechou, zakryjte ho, pokud ho nepoužíváte. Pokud ho nemůžete zakrýt – nakloňte ho, aby z něj mohla odtékat voda. Pokud výrobek nepoužíváte, skladujte ho na chladném, suchém místě. Zajistěte v jeho okolí proudění vzduchu, aby výrobek nevlhnul a neplesnivěl.

Plíseň

Plíseň je druh houby, kterému se daří ve vlhkém prostředí. Nepotřebuje nic jiného, než váš hezky dřevěný zahradní nábytek, na kterém by mohla růst. Stavební dřevo je mimořádně náchylné na plíseň. Pokud si všimnete nějaké plísně, stačí ji omýt jemným mýdlovým roztokem a osuší čistou a suchou látkou. Surové dřevo může obsahovat tečky nebo proužky způsobené ryzcem indigovým. Použijte základní nátěr (v prvním roce pouze průhledný), kterým dřevo ochráníte před modřými skvrnami – poraďte se v nejbližším obchodě s odborníky, kteří vám doporučí nejvhodnější přípravek na ošetření dřeva.

Dřevo je živé.

Přirodní vlastnosti dřeva, které se nepovažují za vadu:

Trhliny

Dřevo je živé. Během životního cyklu se ve dřevě mohou objevit trhliny. To je v pořádku a nemá to vliv na životnost výrobku. Rozpínání a smršťování při vysychání dřeva.

Rozpínání a smršťování

Po zakoupení bude dřevěný výrobek ještě dlouho vysychat a jeho rozměry se mohou zmenšit o 5–8 %. Příležitostně zkuste dotáhnout šrouby, aby byl výrobek stabilní. Při dlouhodobých deštích dřevěné části výrobku pohlcurí vlhkost ze vzduchu a rozpínají se.

Drsný povrch

Přestože dřevěné povrchy při hoblování nebo frézování ošetřujeme, i při nejlepší péči se může na dřevě objevit mírně drsný povrch. Na drsném povrchu se mohou objevit zářezy nebo praskající vlákna.

Zbytky solí

Pokud byl výrobek impregnován pomocí vysokotlakých technologií, může vykazovat bílé až nazelenalé skvrny. Vznikly smísením pryskyřice a impregnačního přípravku a za nějaký čas zmizí.

Jádro

Jádro jehličnatých stromů se nachází uprostřed kmene. Dřevěné jádro nepředstavuje vadu, je to přirozená součást dřeva.

Větve a suky

Jednou z vlastností dřeva jsou větve/suky. Zahradní nábytek se vyrábí z živých stromů s větvemi, které zanechávají na prknech suky.

Výrony pryskyřice

Váš výrobek byl vyroben z borovice, smrku nebo modřínu sibiřského. Pro toto dřevo je typické, že se na povrchu výrobků může objevovat pryskyřice. Pryskyřice se často objeví až po dlouhé době a při výrobě nemusí být patrná.

Následující jevy nejsou považovány za vadu a nevztahuje se na ně záruka: Přirozené vlastnosti dřeva a jeho přirozené opotřebení.

Změna tloušťky a rozměrů součástí o 5–8 %. Poškození způsobené nesprávnou instalací výrobku.

Mechanické poškození. Jakékoli zpracování nebo úprava výrobku či dílů zákazníkem (s výjimkou ošetření dílů ze surového dřeva po zakoupení průhledným základním nátěrem). Poškození způsobené kupujícím při přepravě a přesunu výrobku. Změny odstínu a struktury dřeva v průběhu času. Ztráta hodnoty výrobku. Vypadávání suků, které nepřispívají k celkové pevnosti výrobku. Ohýbání a kroucení dřevěných částí, pokud to nemá vliv na stabilitu výrobku.

Jakékoli poškození nezpůsobené přímo kvalitou výrobního procesu. Plíseň na výrobku, který byl zakoupen neošetřený (přírodní), i když byl poté v domácích podmínkách ošetřen. Pokud byly připravené desky natřeny v domácích podmínkách, začnou se po čase objevovat části, kam se nátěr nedostal.

Příslušenství v balení výrobku se může lišit od příslušenství znázorněného v montážním návodu (jsou-li dodány). Nemá to vliv na pevnost výrobku.

Varování

Střechy zahradních staveb mají určitý počet madel.

Zatížení střechy nesmí překročit 50 kg/m² (zahradní domky) a 20 kg/m² (malé stavby jako například kůlny, dřevníky atd.).

Záruka

Záruka na výrobek je 24 měsíců.

Ohledně záruky se obraťte na prodejce a předložte doklad o nákupu.

ENG

Thank you for purchasing our product!

Please read carefully and save for future use!

Distributor: ASKO a.s., Fr.Diviše 984, 10400, Praha 10, CZECH REPUBLIC

Safety

For domestic use only. When assembling and using - always use on firm level ground. Periodic structural checks of this product should be undertaken, do not use if you have any doubts its fitness for purpose. Do not sit or stand on the product and any place. This furniture must be set up by a competent adult.

During assembly, tighten all screws, bolts, and nuts loosely. Tighten them up securely only at the end of assembly, after all parts have been assembled. Make sure you strengthen the products to the ground or base surface to protect them from harsh winds and unexpected storms. Lighter products, including garden sheds with board thickness 12-19mm can be blown away in very strong winds if not secured.

At the beginning of the season

Check to ensure that all components and fixings of this product are secure, do not use if you have any doubts about its fitness for purpose. At the end of the season This product should be stored under cover during prolonged spells of adverse weather (wet or cold) and also during the winter (ideally in a garden shed or garage). Always clean and dry thoroughly before storage.

Care instruction of wooden surfaces. Wood is a natural material whose appearance will deteriorate when left outside. Wood should be regularly impregnated or treated. Ask for advice in your local DIY store.

Care and maintenance of furniture. Wipe clean with a mild soapy solution. Wipe dry with a clean and dry cloth. To ensure that you receive maximum pleasure from your new product, it is very important for you to read this instruction. Please note, that quality guarantee is only valid when this maintenance instruction has been followed carefully.

For you to know: Impregnated products can smear. This will disappear after a short time. The colour on pressure treated products can vary from board to board can be lighter or darker than colour on labels or photos, this is the natural characteristics of wood and perfectly normal. Discolouration from impregnant salt or sometimes mould can accrue on the product.

Vacuum impregnated products TREATED WOOD CONTAINING A BIOCIDAL PRODUCT Celcure® C65 preserved wood is protected against wood destroying insects and wood rotting fungi

Active Ingredients: Basic Copper Carbonate, DDACHloride and DDACarbonate.

Stained products PROTIM AQUATAN ES5 is a coloured, water-based concentrate which is diluted with water. It is a decorative finish which colours the wood. Protim Aquatan ES5 treated wood is not protected against wood destroying insects or wood decaying fungi. Preservative treatment is required to protect against these organisms.

Active Ingredients: 3-iodo-2-propynyl butylcarbamate, propiconazole.

Treated timbers which are no longer usable may be disposed of in accordance with national and local regulations.

Product for life Our products are produced from durable Northern pine and spruce. If well maintained, our picnic table can serve you the time which takes new tree to grow.
All products, when necessary, comes with part assembly kit and simple step-by-step assembly instruction.

How do you keep your product beautiful for many years to come? Always clean the product with mild soap solution and dry with clean, dry cloth. If you spill the liquid, always wipe it off as quickly as possible.

Not painted products will start to turn grey, regardless of colour of the treatment at the time of purchase. This is the natural beauty of wood, which shows that it changes and moves on even after turned into the product. If you want to paint, paint, or otherwise treat the product - consult at the nearest retail outlet, where experts will recommend the most suitable paint or wood treatment product. If you have bought **painted product** - first maintenance, depending on weather conditions, is only required after 3-5 years. Frequency of maintenance depends on the weather impacts and location of the product. Keep metal parts of your product well oiled. Oil them at least once a year or when necessary.

If you have bought **stained product** - first maintenance, depending on weather conditions, is required after 1-2 years. Frequency of maintenance depends on the weather impacts and location of the product. Stained products are not protected against wood destroying insects or wood decaying fungi. The stain does not penetrate the wood and depending on the weather conditions can wash down on flat product surfaces. If this happens, consult your nearest DIY store to get the best advice on further domestic treatment.

If you have bought **untreated (natural) product**, treaty the surface with antiseptic, anti-mould agent during installation. Consult your nearest DIY for treatment agents available. Further treatments depend on the treatment you will use first time. Treatment agent or paint must be applied to each part separately. If you are painting of treating factory assembled panel; with any other colouring, please take into the account, that during drying, unpainted parts of wood will appear. This will not be considered as claim. In time, mould can appear on naturally bought products, even after home treatment. Keep metal parts of your product well oiled. Oil them at least once a year or when necessary.

Tips Assembly

Assemble according to the instructions supplied with the product. Always assembly your product on flat, even surface and always according to the instruction. **During the assembly, loosely fit the screws at first, fastening then tight only when fully assembled.** Check furniture fittings at least once a year - the screws may require tightening.

Storage

Keeping wooden outdoor products under the shades, will maximise the life of the product. We recommend you cover the furniture if it is to be left outside in the elements if you do not have a shaded area when not in use. If you cannot cover it- tilt your product so that any water can drain away. Store in a cool dry place when not in use. Make sure air can circulate to avoid moisture and mould.

Mould

Mould or mildew is a type of fungus that thrives in the damp climate. It loves nothing more than growing on your nice wooden garden furniture. Timber is especially prone to mildew. Of you spot any mould, simply clean it off with mild soap solution and dry with clean, dry cloth. Raw wood may have dotted, or striped stains caused by the blue mushroom. Use a primer (in first year, use only transparent) for wood treatment that protects the wood from blue spots - consult at the nearest outlet where experts will recommend the most suitable wood treatment product.

Wood is alive.

Natural properties of wood that are not considered defective: Cracks

Wood is alive. During its life cycle cracks can occur; these are acceptable and do not affect the durability of the product. Swelling and wood shrinking while drying.

Shrinking or expanding After purchase, the wooden product continues to dry for a long time and the dimensions can drop to 5-8% of the volume. Occasionally test the screws to ensure the stability of the product. In periods of rain, the wooden parts of product will absorb moisture in the air and expand.

Rough surface. Although we treat wood surfaces when planning or milling, even semi-rough surfaces may appear even at the highest level of care. Notches may show rough surfaces or slight fibre bursts.

Salt exhaustions.

If the product is impregnated with high-pressure technology, it may show white to greenish discharges. These are wood resins mixed with impregnating agents and will disappear over time.

Core.

The core of coniferous trees is in the centre of the trunk. The wood core is not wood damage, but a natural component of wood.

Branches and knots. One of the characteristics of the wood is the branches / knots. When producing products for the garden, live trees with branches are used, which leaves knot places on boards.

The emergence of resins. Your product is made from pine, spruce, or Siberian larch. These woods are characterized by resins that may appear on the surface of the product. Resin often appears after longer periods and might not be visible during the time of production.

The following are not considered defects and does not apply for warranty:

Natural wood characteristics and natural ware of. Detail of thickness and dimensions of the components in the range of 5-8%. Damage caused by incorrect installation of product.

Mechanical damage. Products or parts that the customer has processed or modified in any way (except raw wood parts, treated after purchase with transparent primer). Damage caused to the buyer when transporting and moving the product. Changes in tone and wood structure over time. Depreciation of the product. Knots, which do not contribute to the overall strength of the product, fall out. Bending and twisting of wooden parts if this does not affect the stability of the product.

Any damage not directly related to the quality of the production process. Mould appearance on product, which was bought untreated (natural) even after home treatment. If ready made panels have been painted at home conditions, parts where paint did not get to will start to show in time.

The accessories attached to the product packaging may differ from those shown in the assembly instructions (if supplied). This does not affect the strength of the product.

Warning.

Roofs of garden structures have a certain amount of grip. The roof load must not exceed 50 kg / m² (garden houses) and 20 kg / m² (smaller structures such as barns, log cabinets, etc.).

Warranty

Warranty on product design durability is 24 months. For warranty issues, contact the direct seller, presenting proof of purchase.