




SADA NA INŠTALÁCIU ROZPÁNU




**SPOJKA „T“
(PRE KOV)**

RAL9005: 5901891473483
RAL7016: 5901891479508

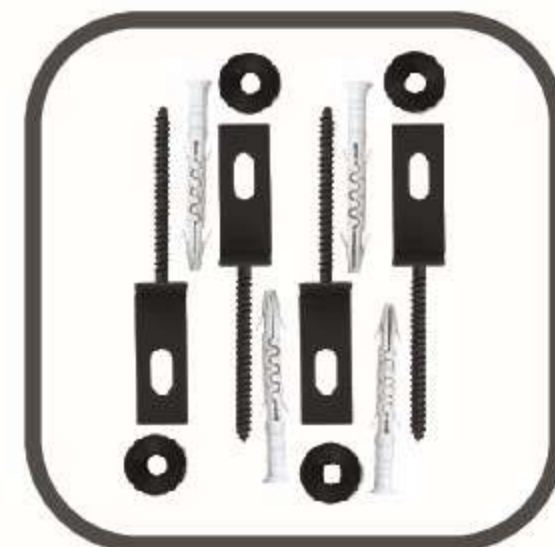

**SPOJKA „O“
(PRE BETÓN)**

RAL9005: 5901891473445
RAL7016: 5901891479492

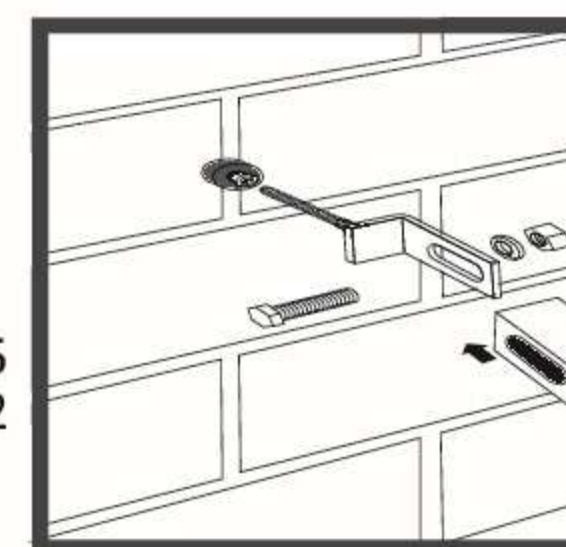

**HLADKÉ TYČE
50X50**

RAL9005:
RAL7016:



**HLADKÉ TYČE
70X70**


RAL9005:
RAL7016:

SÚPRAVA NA INŠTALÁCIU BRÁNKY




**SPOJKA
80x80 mm**

5900652456864

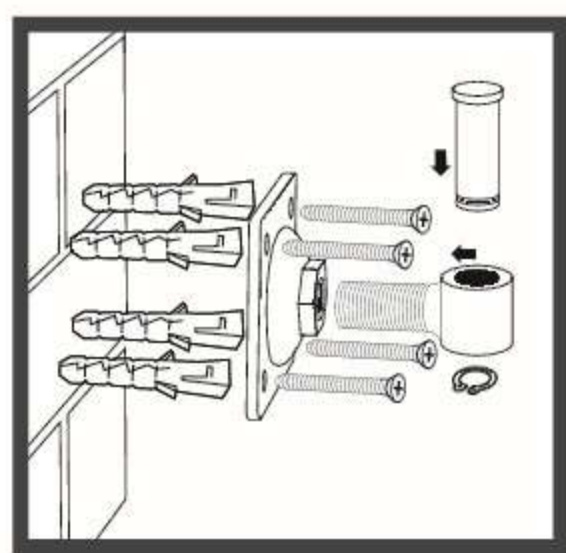


**UZAMKNUTIE
BRÁNKY**

RAL9005: 5901891473520
RAL7016: 5901891473537

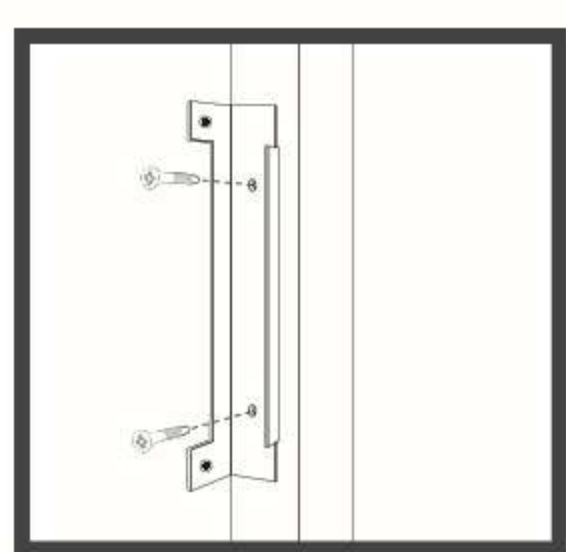

**KĽUČKA SO
ZÁMKOM**

RAL9005: 5900652453825
RAL7016: 5901891476262

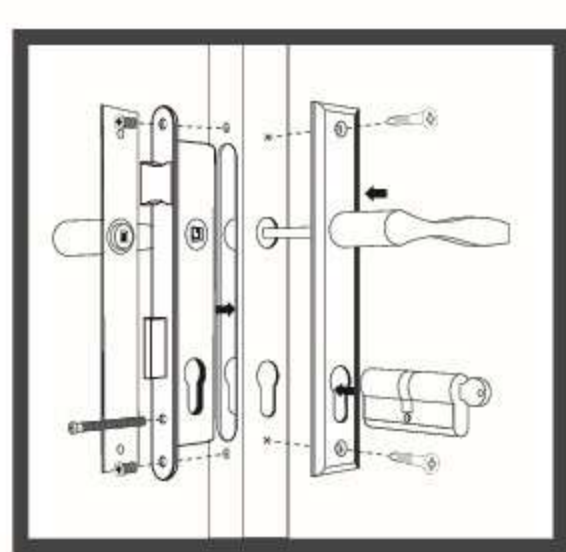

**STĽPIK BRÁNY A BRÁNKY
S NITOVACOU MATICOU
100X100 / 70X70**


RAL9005:
RAL7016:

SADA PRE DVOJKRÍDLOVÉ BRÁNY




**ZHORNÉ
UZAMKNUTIE
BRÁNY**

5901891474930

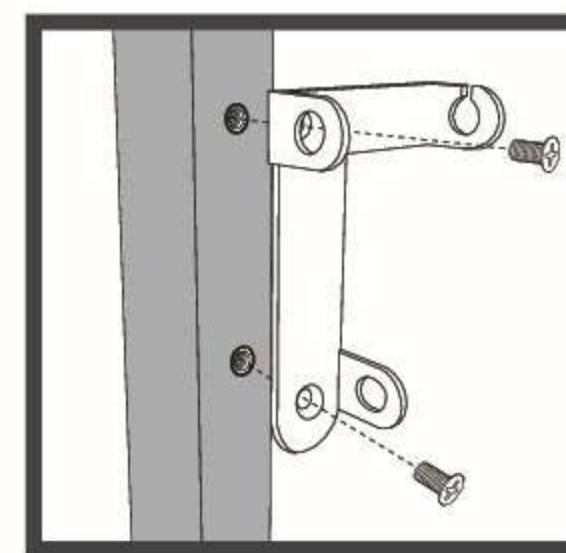


**SPODNÉ
UZAMKNUTIE
BRÁNY**

5901891474923

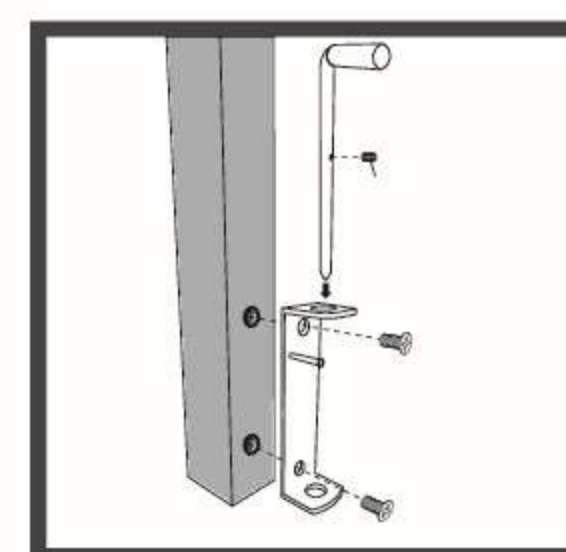

**BLOKÁDA
DVOJKRÍDLEJ
BRÁNY**

5902276530722

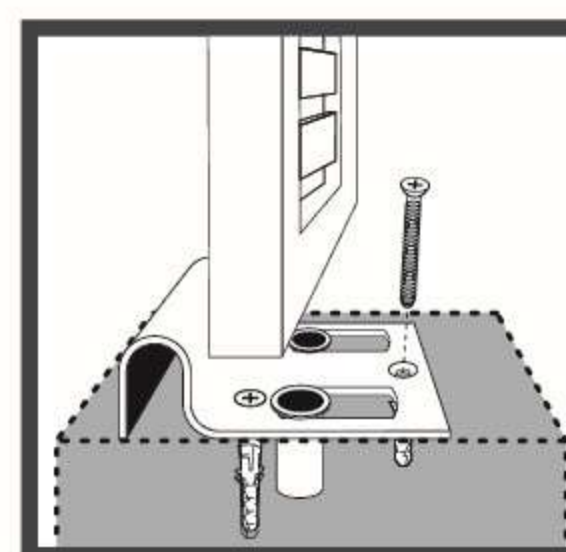

**STĽPIK BRÁNY S NITOVACOU MATICOU
100X100 / 70X70**

RAL9005:
RAL7016: