
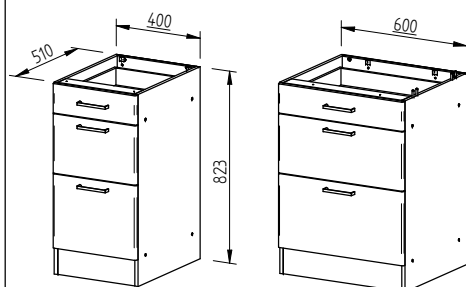
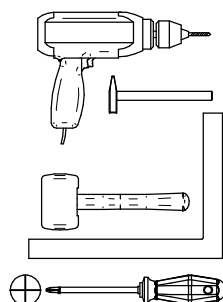
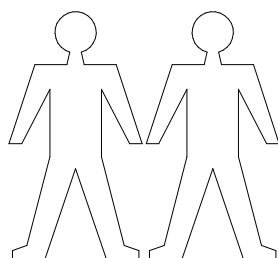







MiniMax

S 40,60 3Z



MM / 005

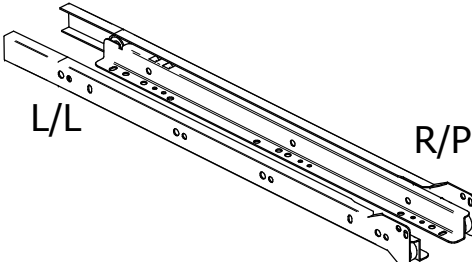


1	 ø8x35 x10	2	 a ø7x50 x4	3	 ø3,5x20 x30	13		x3
4	 x4	5	 ø8 x4	6	 ø15 x4			
7	 ø4x30 x7	8	 ø4x25 x2	9	 M4 x6			
10	 ø6,3x11 x12	11	 ø1,2x30 x38	12	 x2			
14	 x4	15	 ø8 x4	 L/L R/P				x3
16	 ø3,5x15 x4	17	 x6				20	
18	 x12	19						

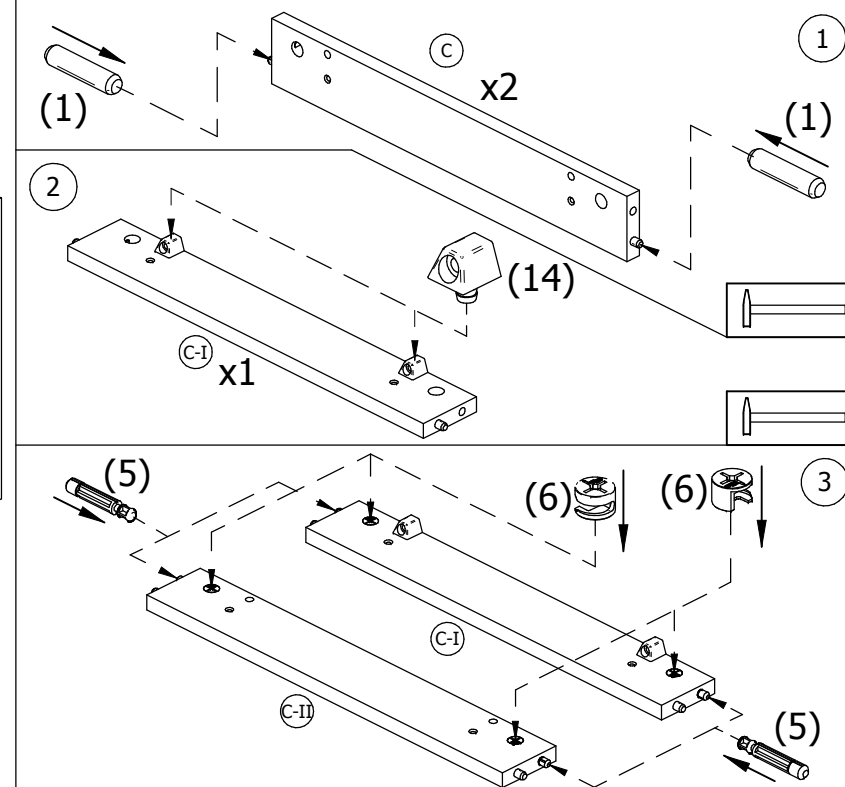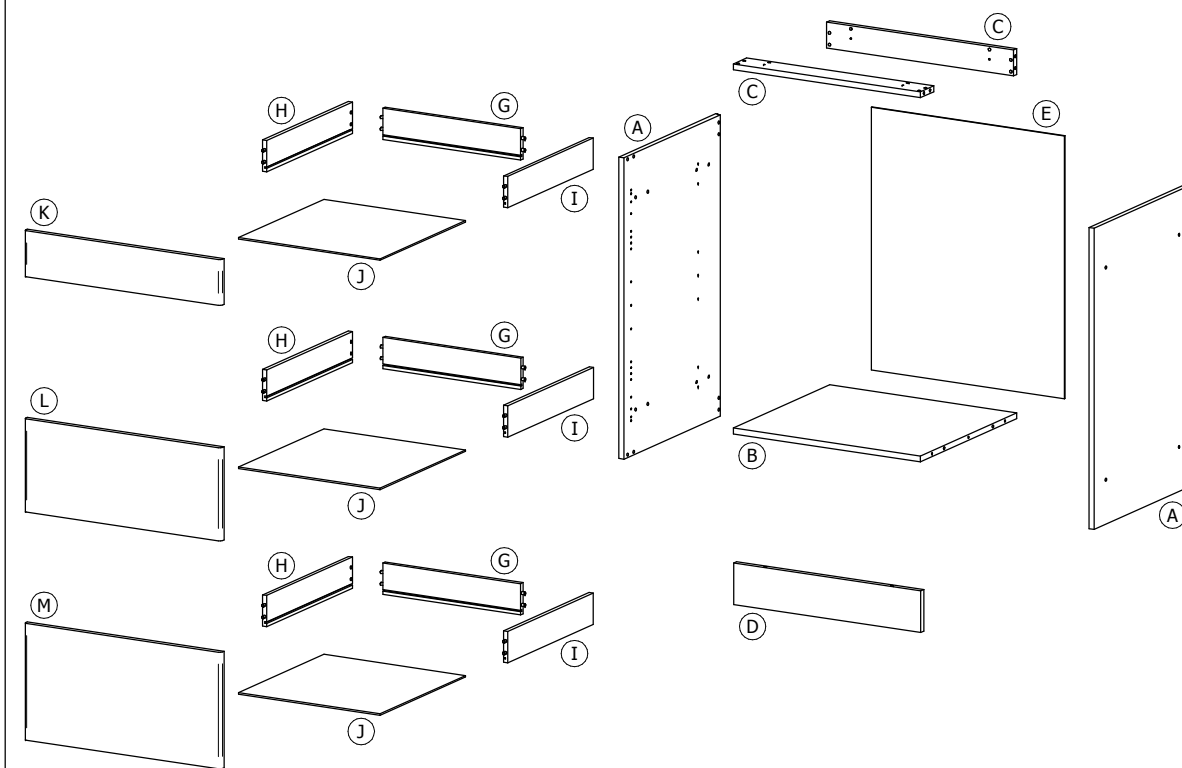


4

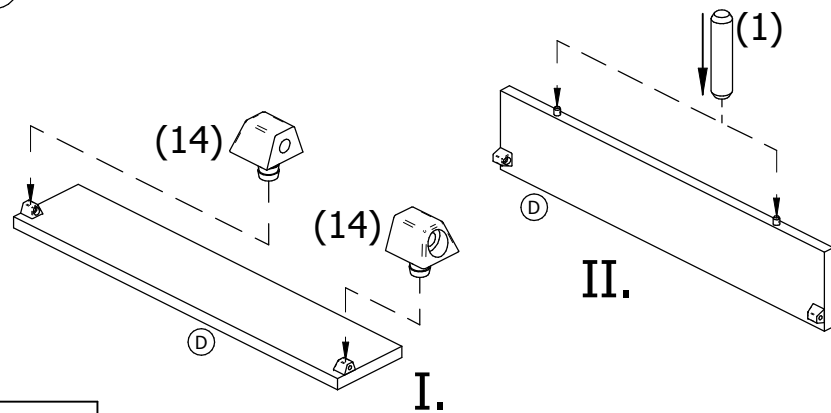


5

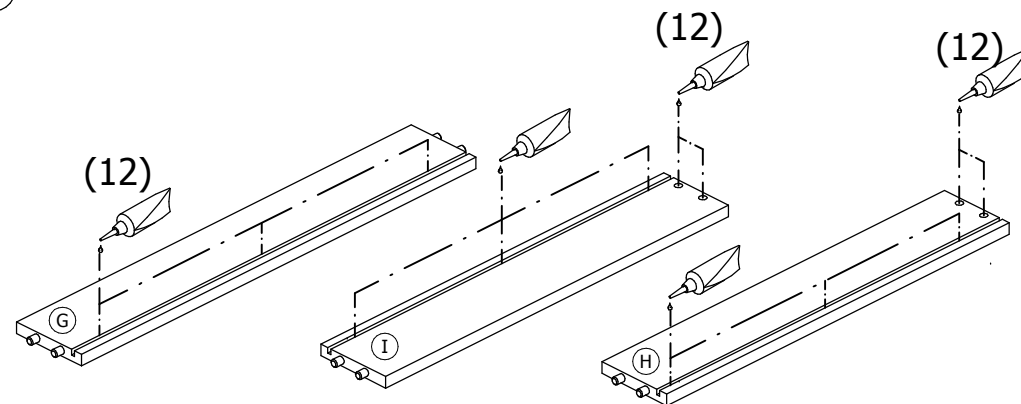


6

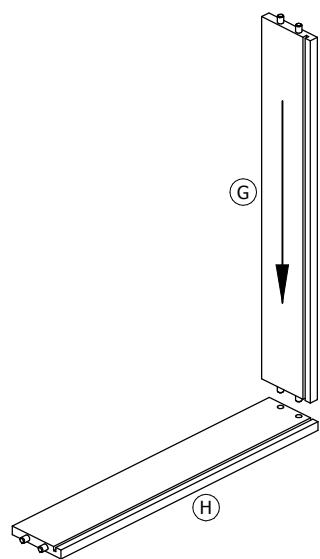


7

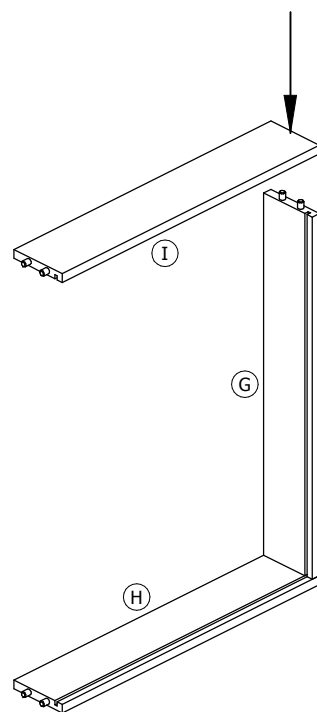






8

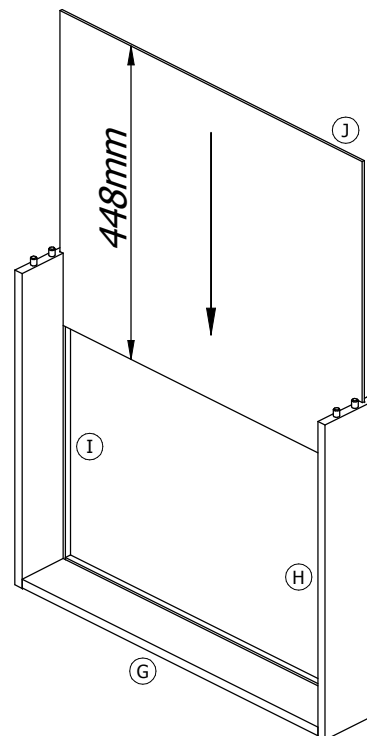

9

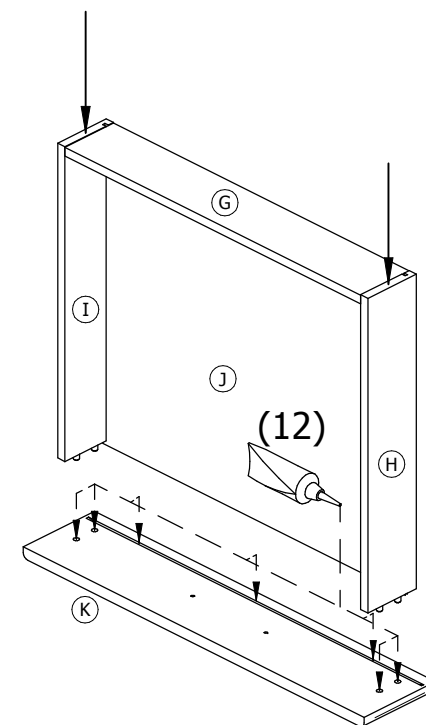


10

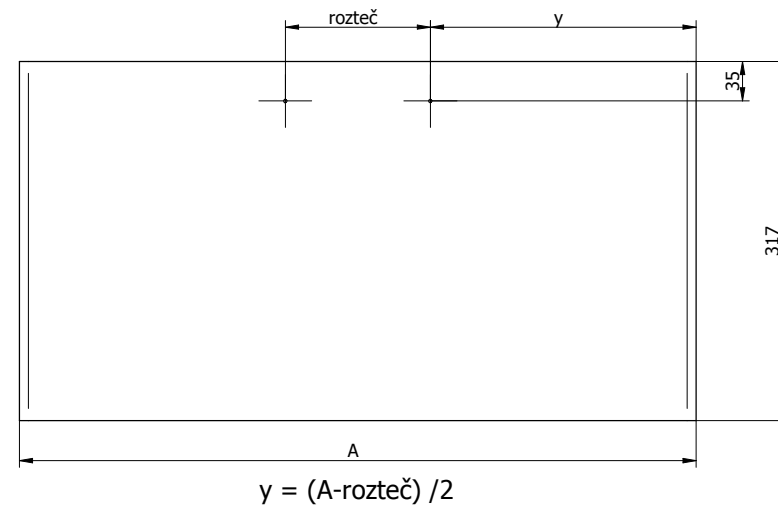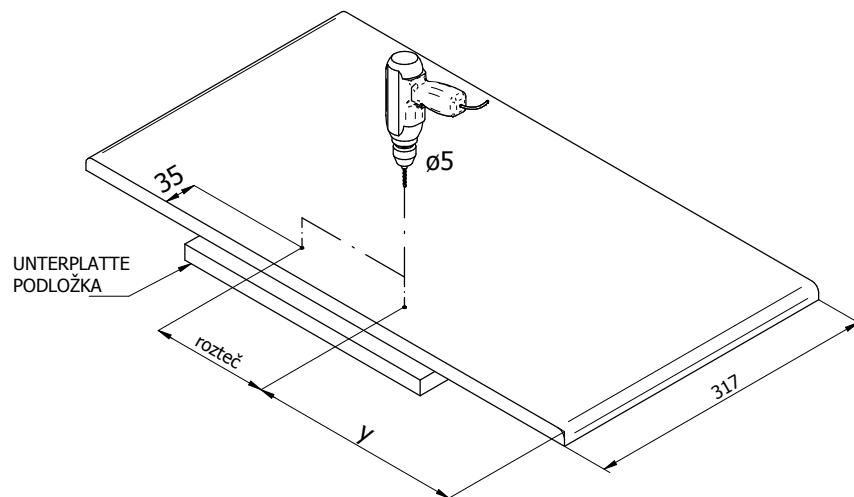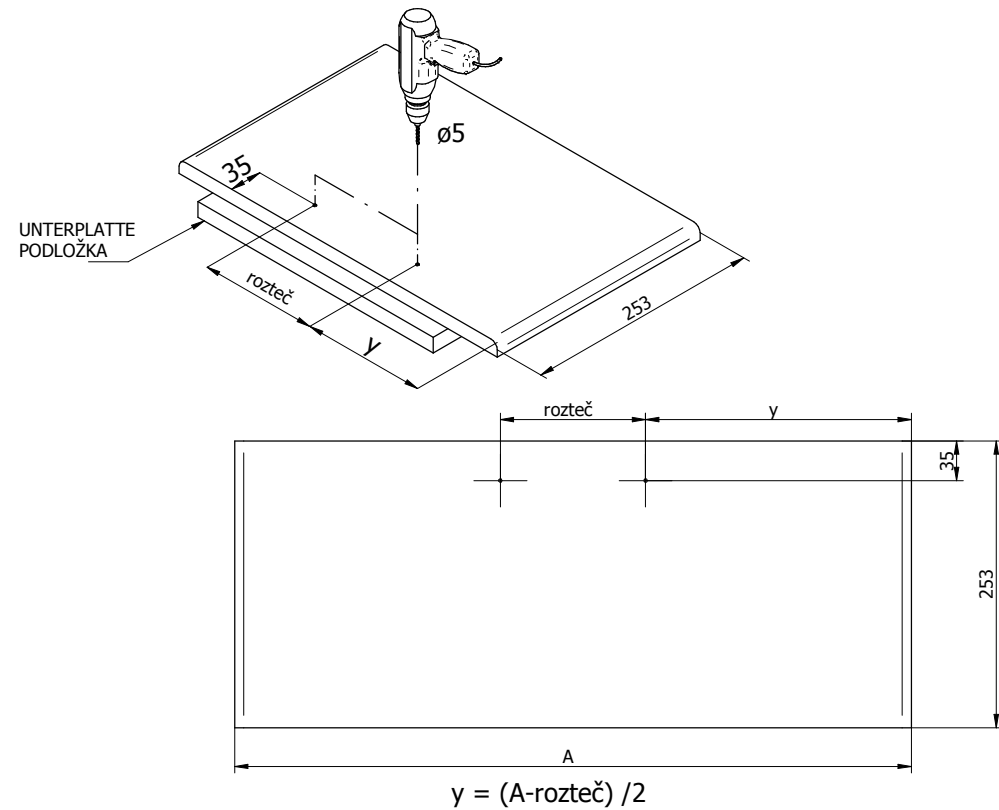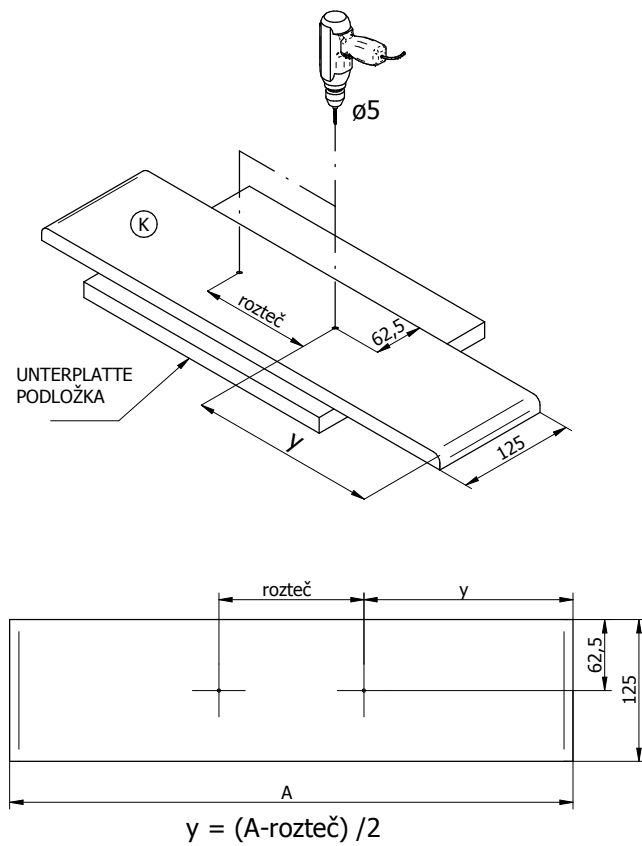




(18+3)

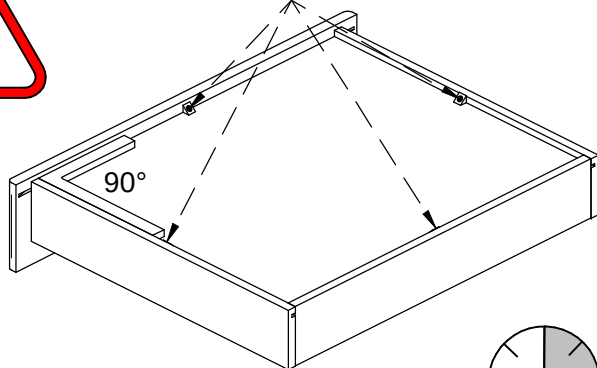


11

12

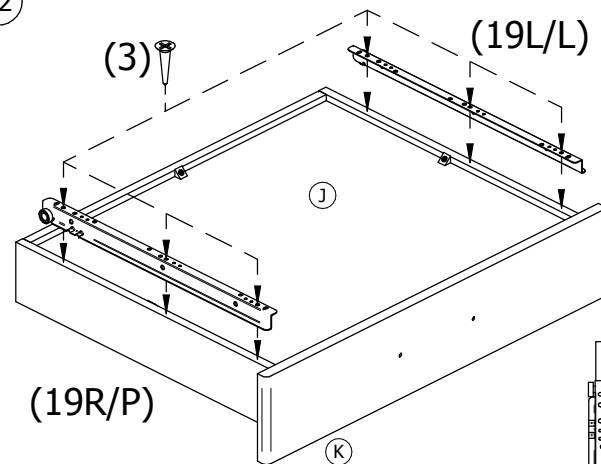

(19R/P)


(19L/L)

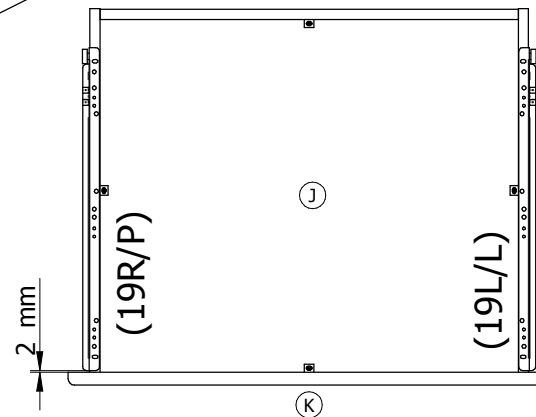


2 mm

(19R/P)

(19L/L)





14

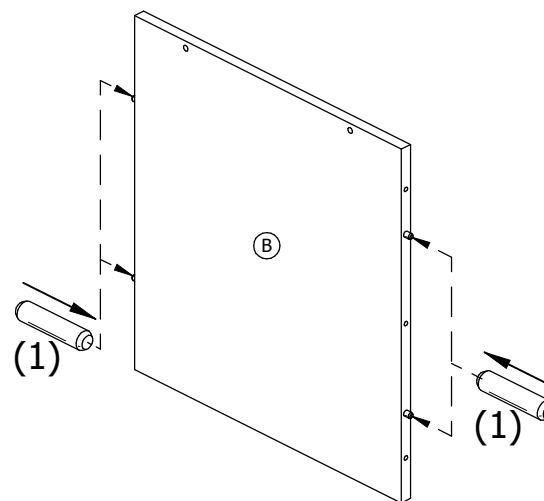


(1)

(1)

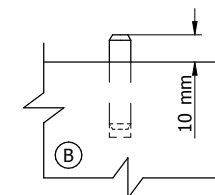


ACHTUNG!!!
POZOR!!!

SCHUBLADENZARGEN ENTFERNEN
UND VERLEIMEN!
KORPUS ŽÁSUVKY MUSÍ BYT ZGLEJENÝ!
KORPUS ŽÁSUVKY MUSÍ BYT SLEPENÝ LEPIDLEM!





20 min










13

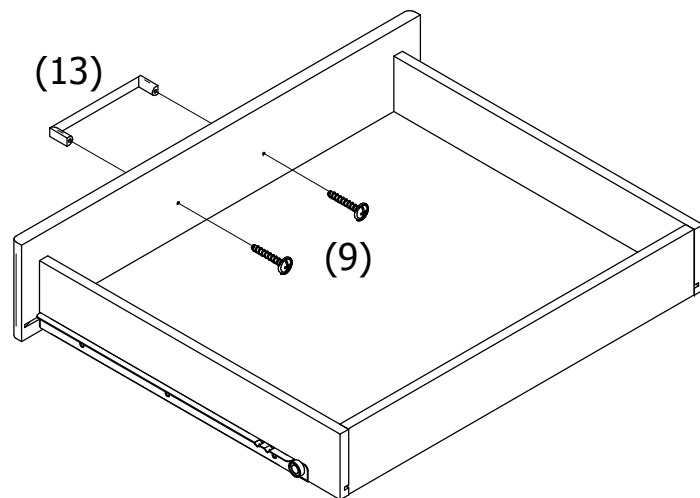


(13)

(9)

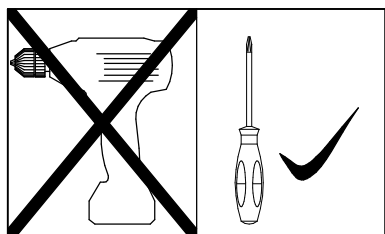


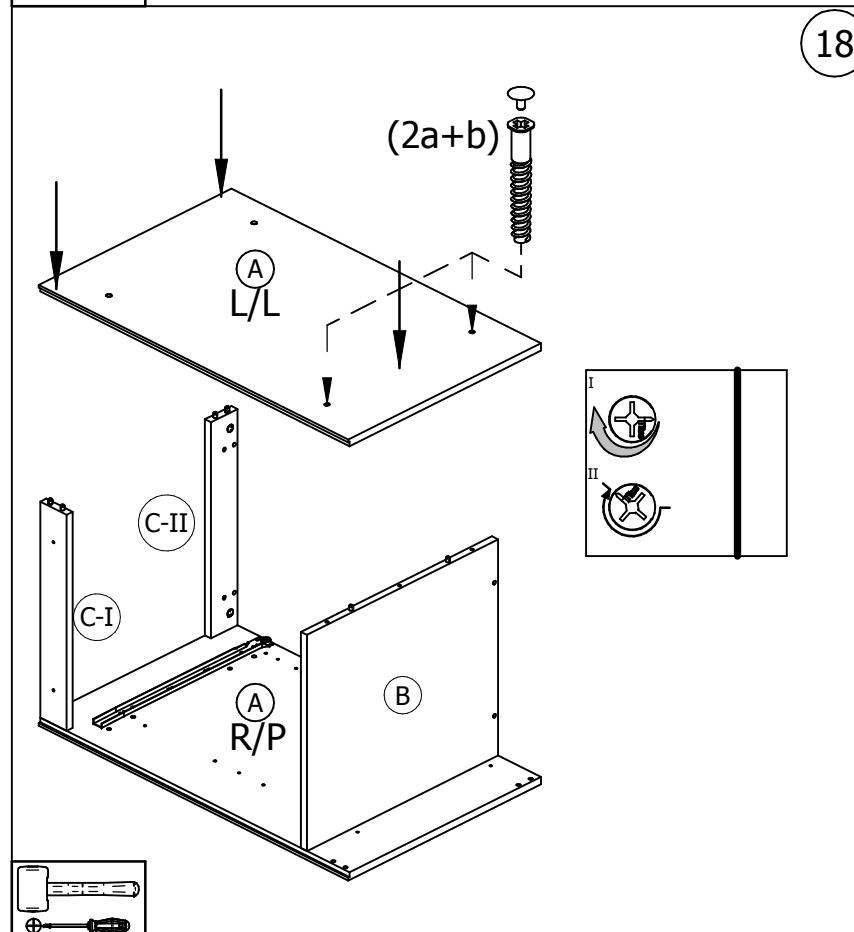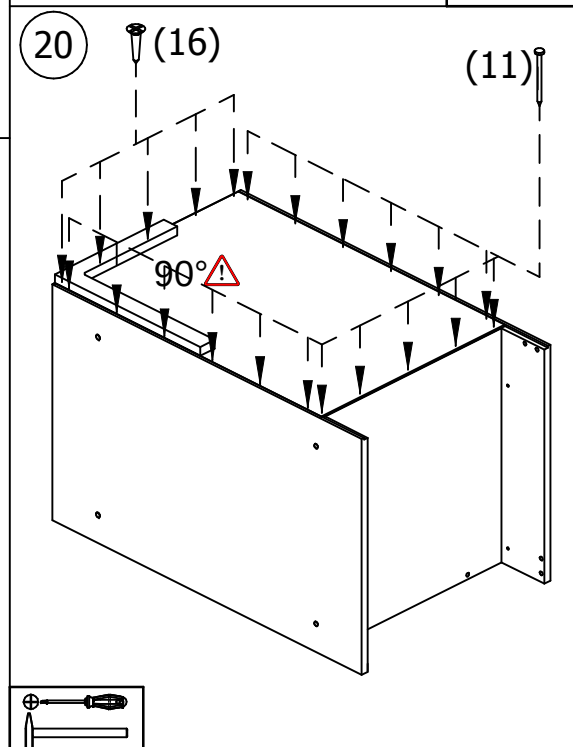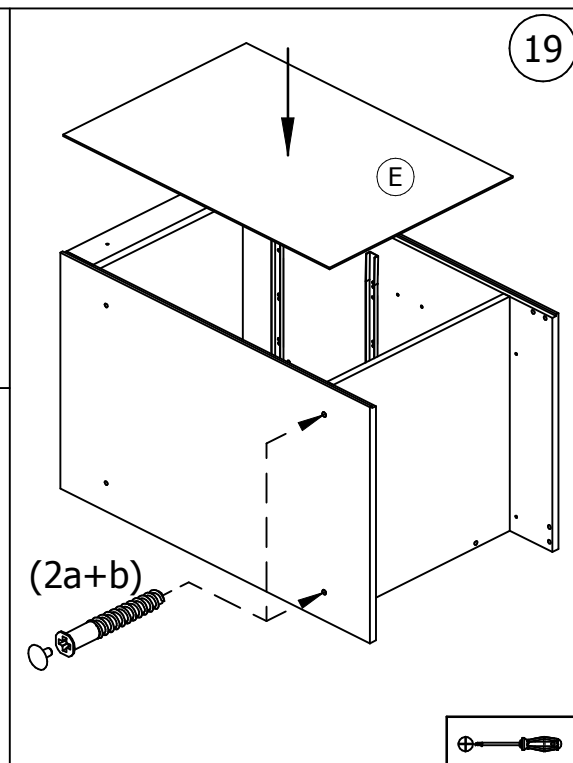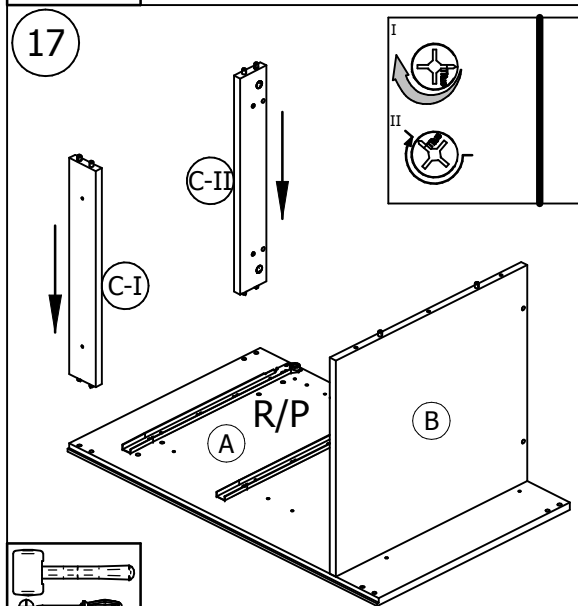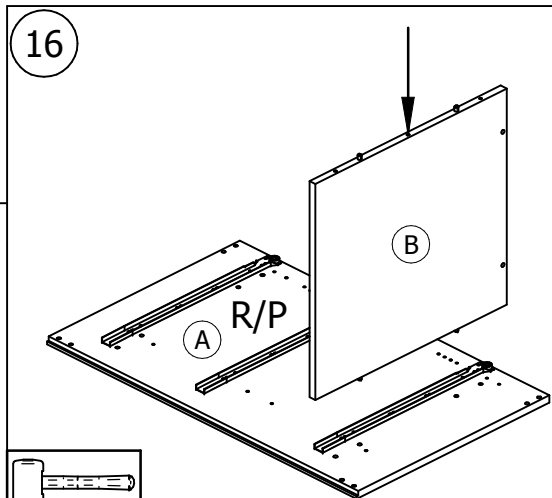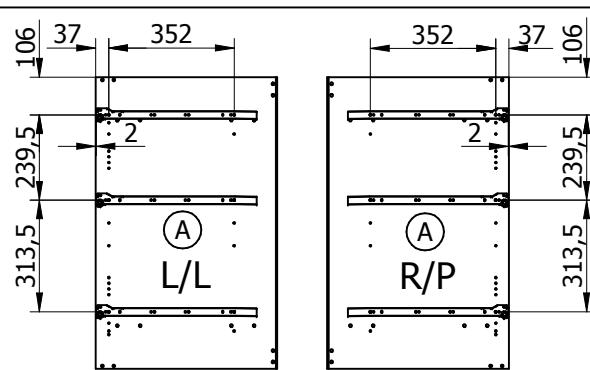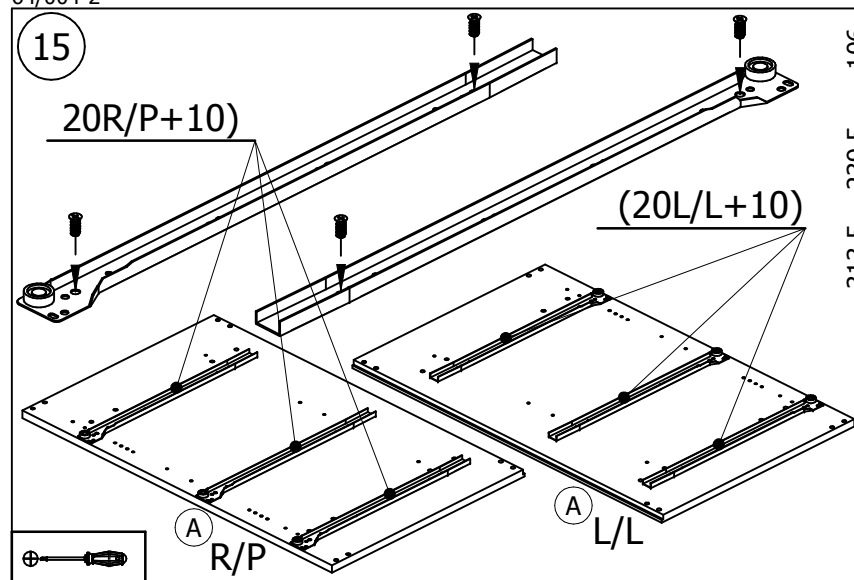

21

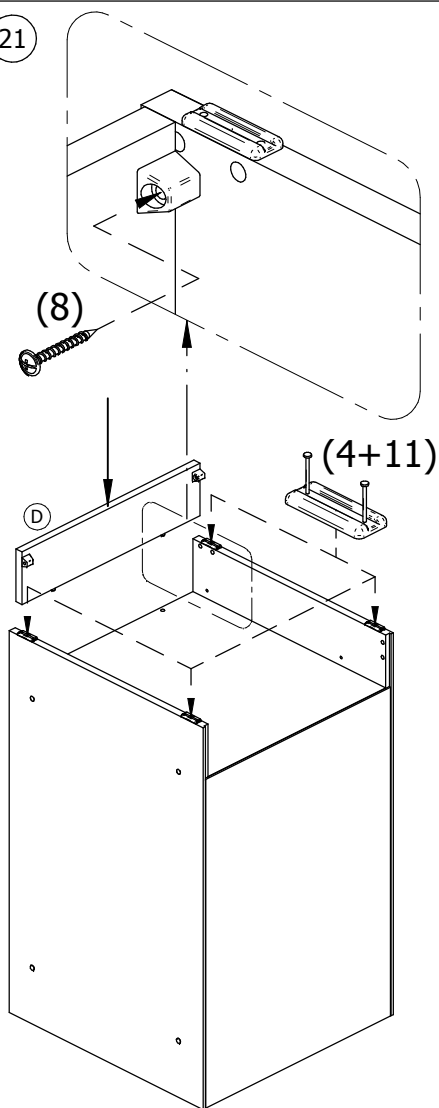

22

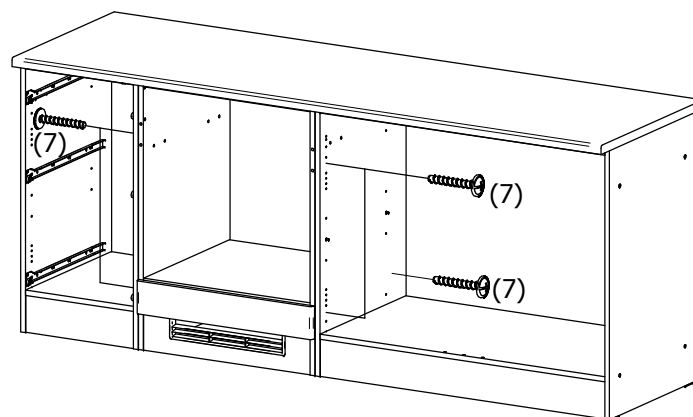

DIE POSITIONIERUNG DES VERBINDUNGSBESCHLAGS Nr.7 INDIVIDUAL WÄHLEN, DER POSITION DES NEBENSCHRANKES UND INNENAUSSTATTUNG DES SCHRANKES (TÜREN, BÖDEN, SCHUBLÄDEN) NACH.
 UMIESTNENIE SPOJOVACIEHO KOVANIA Č.7 VYBERAJTE INDIVIDUÁLNE, PODĽA UMIESTNENIA SUSEDNEJSKRINKY A PODĽA VNÚTORNEHO VYBAVENIA (DVERE, POLICE, ZÁSUVKY).
 UMÍSTĚNÍ SPOJOVACÍHO KOVÁNÍ Č. 7 VYBÍREJTE INDIVIDUÁLNE, PODLE UMÍSTĚNÍ SOUSEDNÍ SKŘÍNĚ A PODLE VNITŘNÍHO VYBAVENÍ (DVERE, POLICE, ZÁSUVKY).

23

