

MONTAGEANLEITUNG

-  MONTAGEANLEITUNG
-  ASSEMBLY INSTRUCTION
-  DE INSTRUCTIE VAN DE ASSEMBLAGE
-  ISTRUZIONE DELL'ASSEMBLEA
-  INSTRUCCION DE ASAMBLEA
-  INSTRUCTION DE MONTAGE
-  NÁVOD K MONTÁŽI
-  MONTERINGSANVISNING

-  MONTAJ TALIMATI
-  ASENNUSOHJE
-  BRUGSANVISNING
-  BRUKSANVISNING
-  UPUTE ZA MONTAŽU
-  NAVODILA ZA MONTAŽO
-  SZERELÉSI ÚTMUTATÓ
-  INSTRUCTIUNI DE MONTAJ



Modell-Nr.

70690

ART.-NR. FRONT KORPUS

70691  Silber

70692  Silber

70694  Silber

70697  Silber

70696  Schwarz

Friedrich Küpper GmbH
Friedrich-Küpper-Weg
54570 Berlingen
Deutschland

Telefon +49 (0) 65 91 - 95 42 0
Telefax +49 (0) 65 91 - 95 42 17
E-Mail info@friedrich-kuepper-gmbh.de
Internet www.friedrich-kuepper-gmbh.de

EINZELTEILE / PIECES

(B)

1x

910 mm x 450 mm



(I)

1x

1075 mm x 70 mm



(C)

1x

830 mm x 405 mm



(K)

1x

910 mm x 100 mm



(E)

1x

1075 mm x 430 mm



(L)

1x

970 mm x 450 mm



(F)

1x

1075 mm x 430 mm



(M)

1x

970 mm x 458 mm



(G)

2x

1075 mm x 385 mm



(N)

1x

900 mm x 380 mm



(F1)

1x

870 mm x 380 mm



(E1)

1x

870 mm x 380 mm




(O)

10x



830 mm x 395 mm



BEUTELINHALT / BAG CONTENT

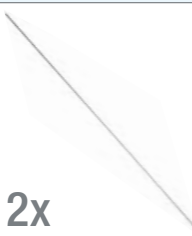 4x M6 x 16 mm	 16x M6 x 12 mm	 4x M6 x 16 mm	 24x ø 6,4 mm	 24x M6	 10x 6,9 x 13 mm
 4x M4 x 10 mm	 4x ø 4,3 mm	 4x M4	 4x 5 x 15	 4x 5 x 5	 4x
 4x	 4x	 4x	 2x	 1x	 1x
 1x	 1x	 1x	 1x		

BENÖTIGTES WERKZEUG / NEEDED TOOLS

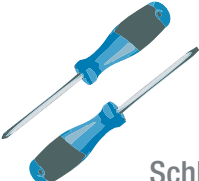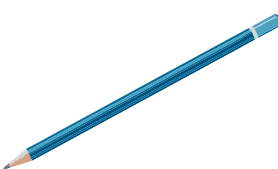 ① PH 1 x 100 PH 2 x 100 Schlitz 6,5 x 150	 ② SW 7 SW 10	 ③ 6 mm
 ④	 ⑤	 ⑥ 5 mm
 ⑦	 ⑧	 ⑨


1.

Paket 1+2 / Package 1+2




2.

① 
Schlitz 6,5 x 150

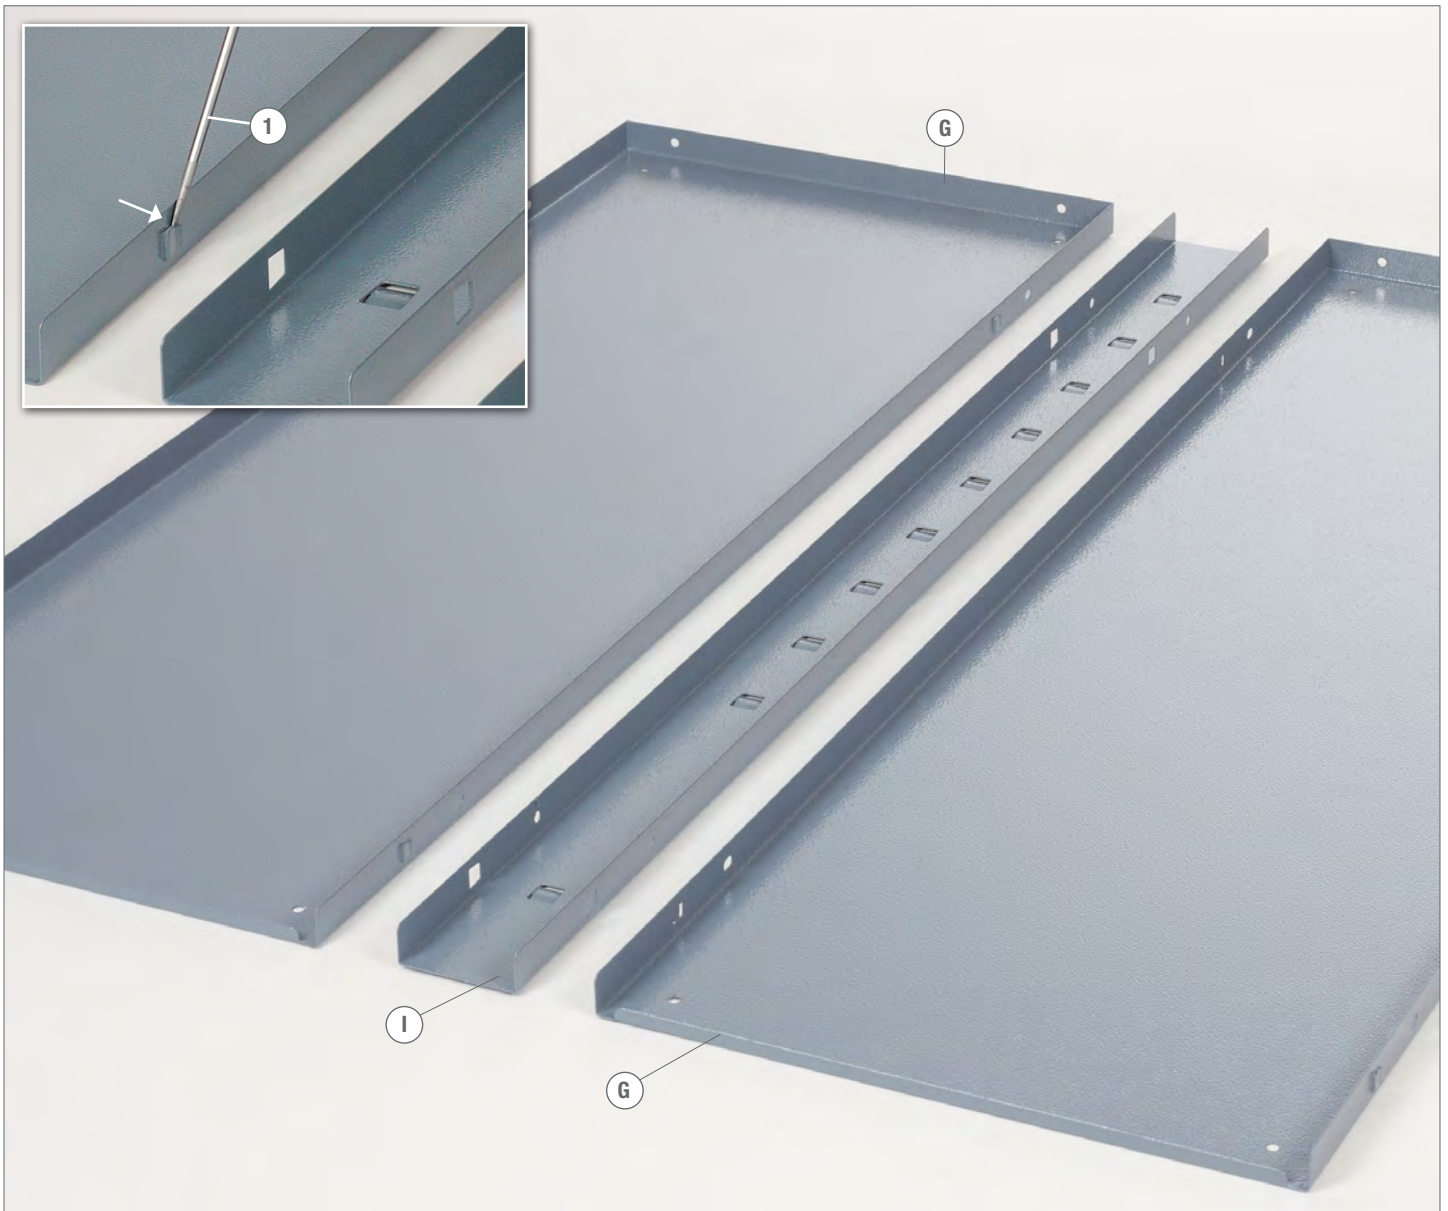

3.

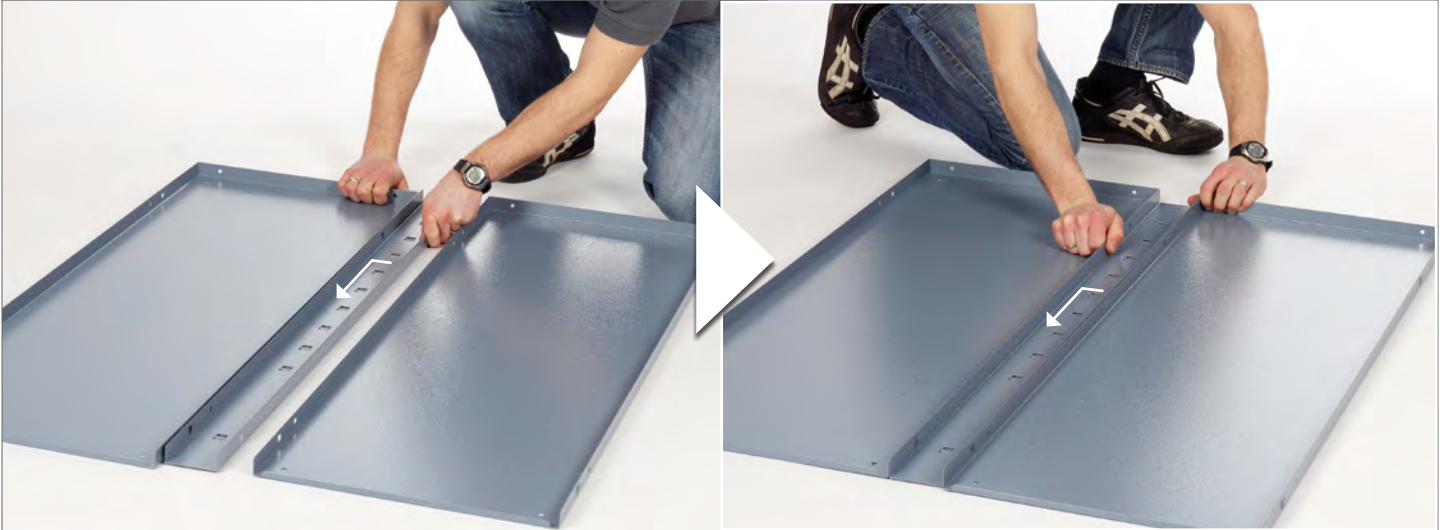

4.

4x M6

4x M6 x 12

4x 6,4 MM


② 2x SW 10



5.



6.

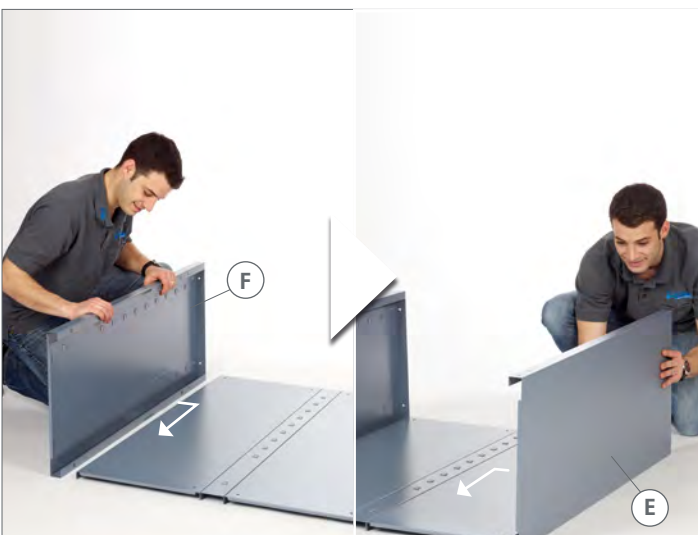

7.



8.



4x M6



4x 6,4 MM




4x M6 x 12



②

SW10

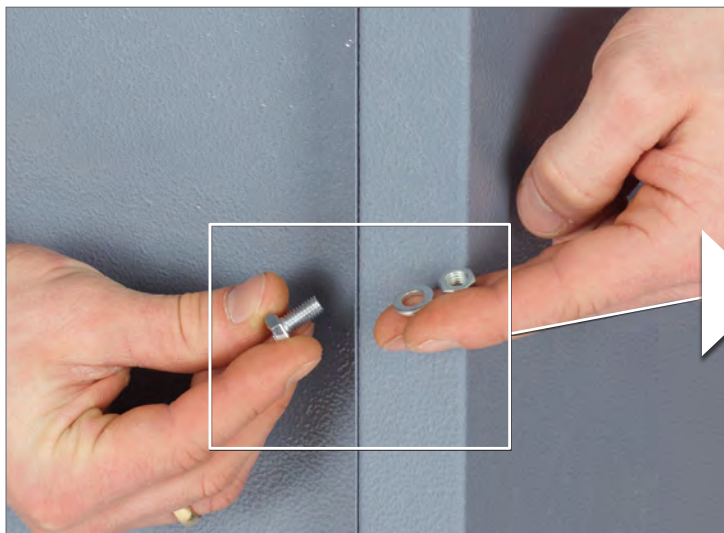

9.



10.



4x M6



4x M6 x 16



4x 6,4 mm



2x

⑥



11.



4x




12.



2x

①


PH 2x100

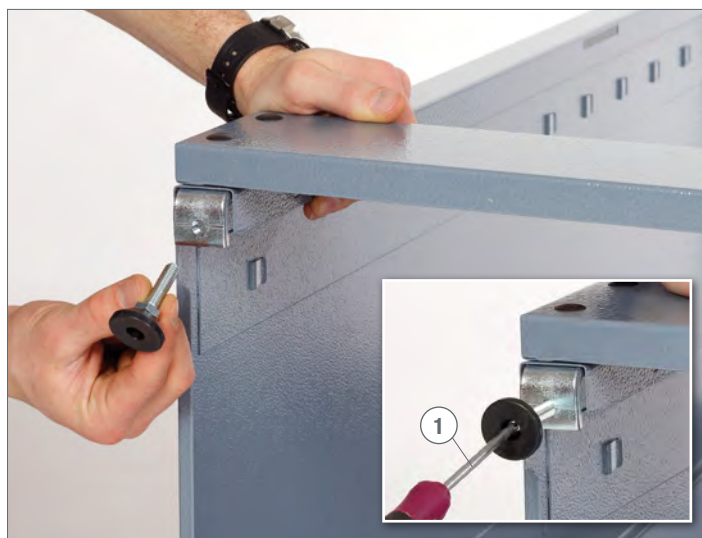

13.  2x



14.  4x M6  4x M6 x 16  4x 6,4 mm  2x  ① PH 2 x 100  ② SW 10

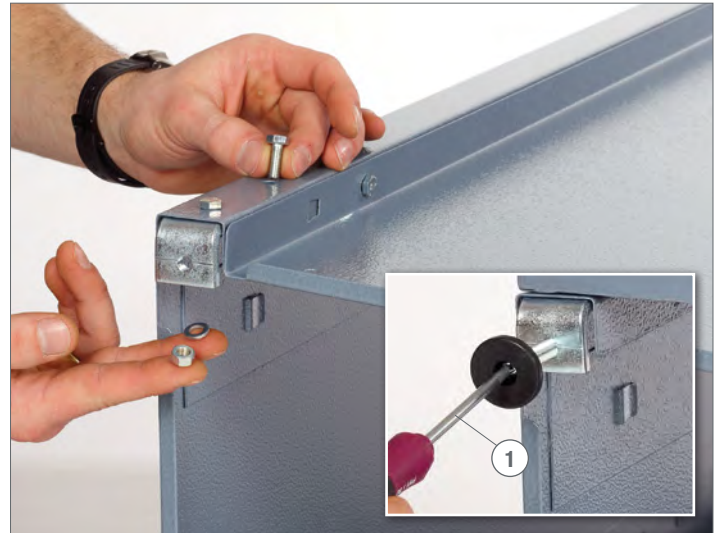

15.



vorne! / this side front!



16.  8x M6  8x M6 x 12  8x 6,4 MM

②  SW 10



17.

① 
Schlitz 6,5 x 150




18. 
2x 5x15

⑤ 



19. 
2x 5x5

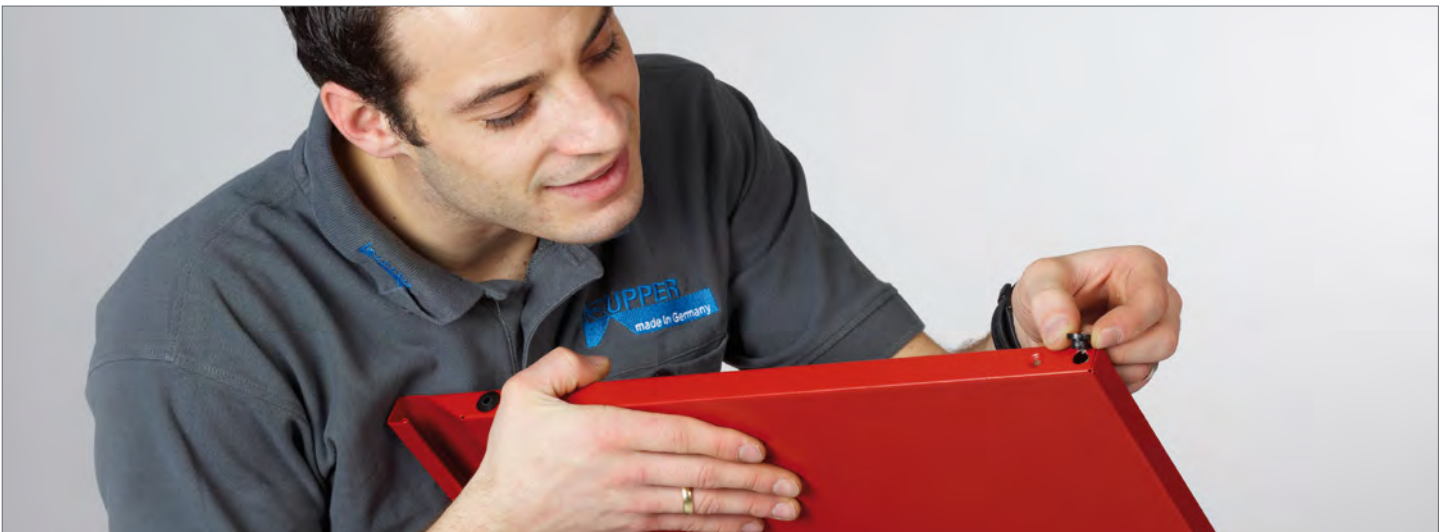

20.  2x 5x15


⑤ 



21.  2x 5x5



22.  1x

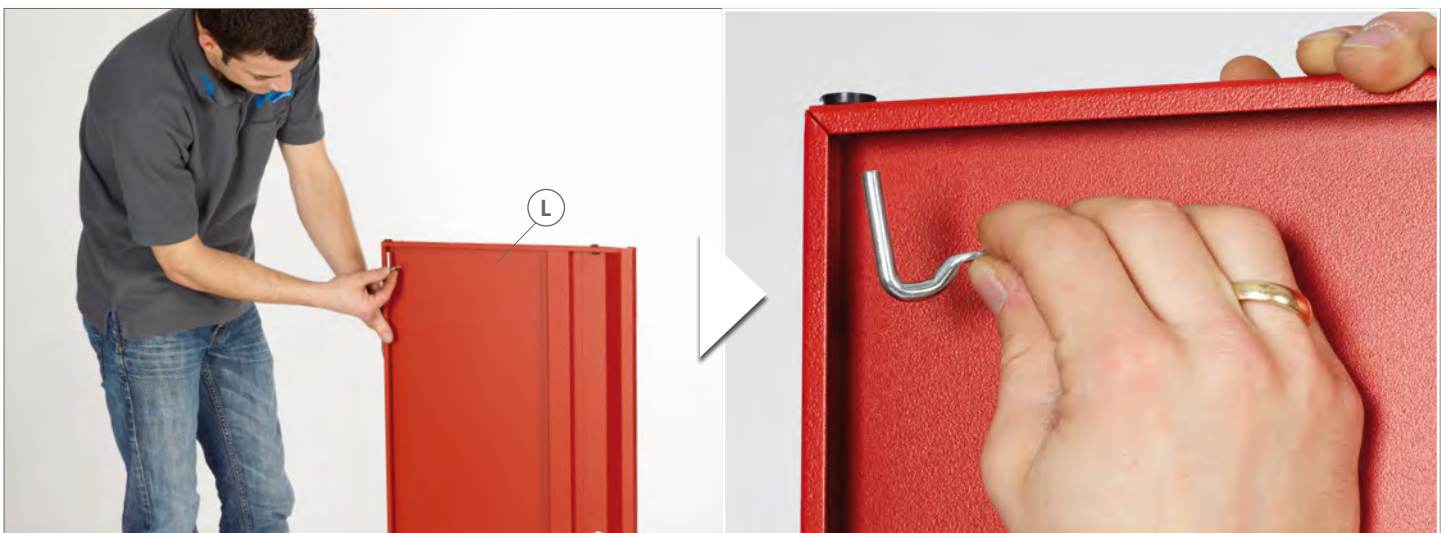

23.



1x M4



1x M4x10



1x 4,3 mm




① PH 1 x 100



② SW 7



24.

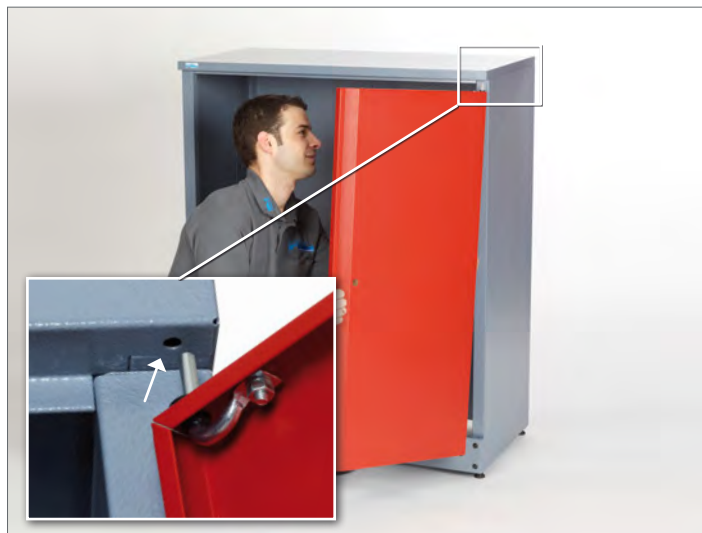

25.



1x



1x M4



1x M4x10




1x 4,3 mm



① PH 1 x 100



② SW 7

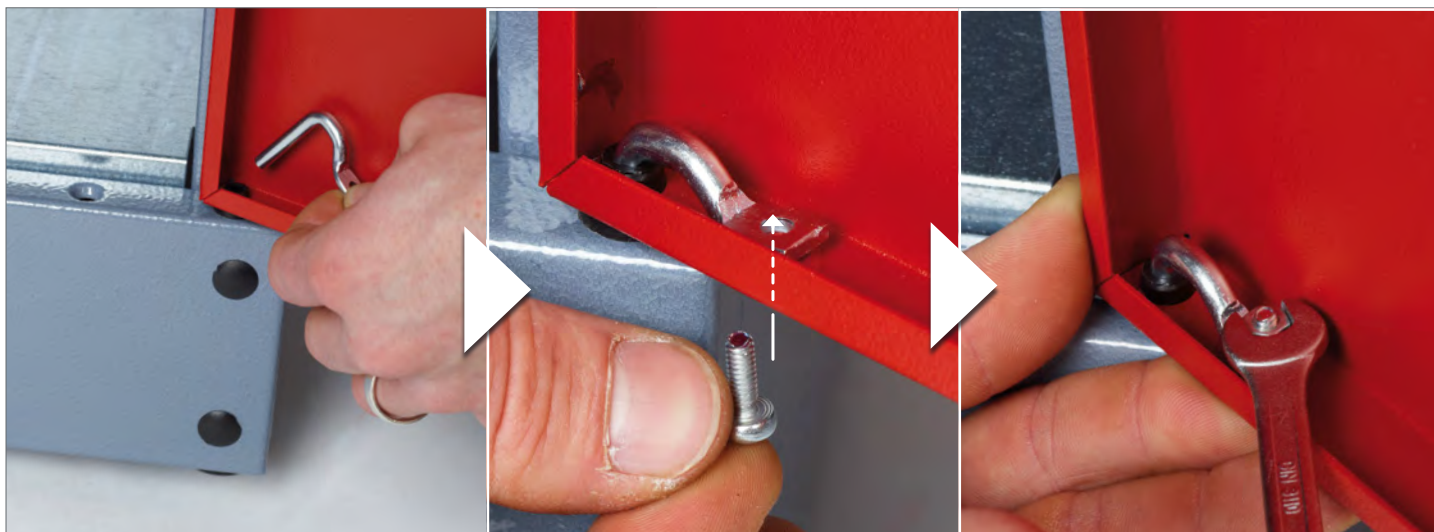

26.



1x



27. 1x M4 1x M4x10 1x 4,3 mm ① PH 1 x 100 ② SW 7




28.



29. 1x 1x M4 1x M4x10 1x 4,3 mm

① PH 1 x 100 ② SW 7

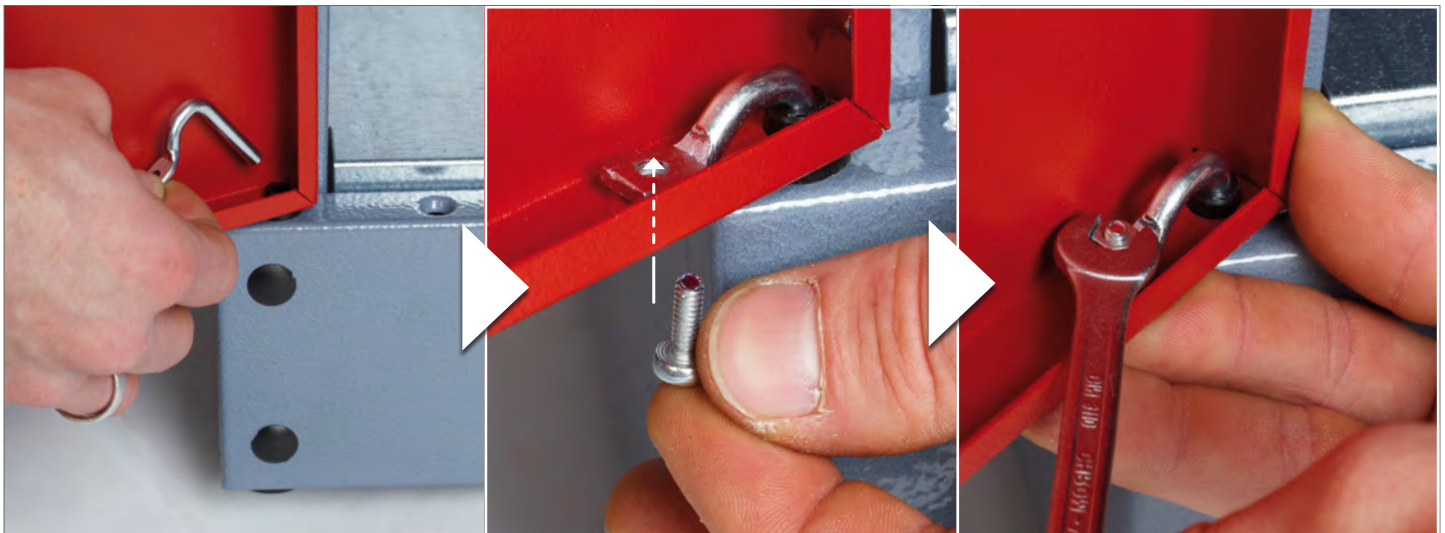

30. 1x 1x 1x

⑨



31. 1x _____




32. 1x _____



33. 1x 1x 1x

9

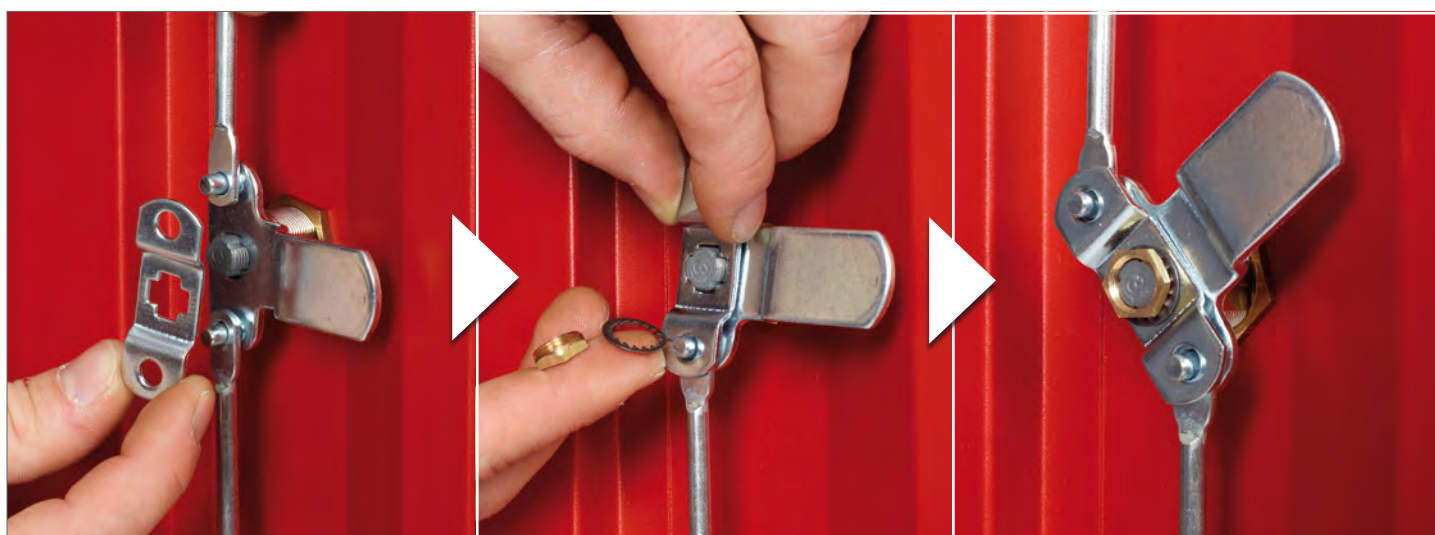

34.



35.



36.



37.



38.

10x 6,9x13


② 
SW10




39.



40.

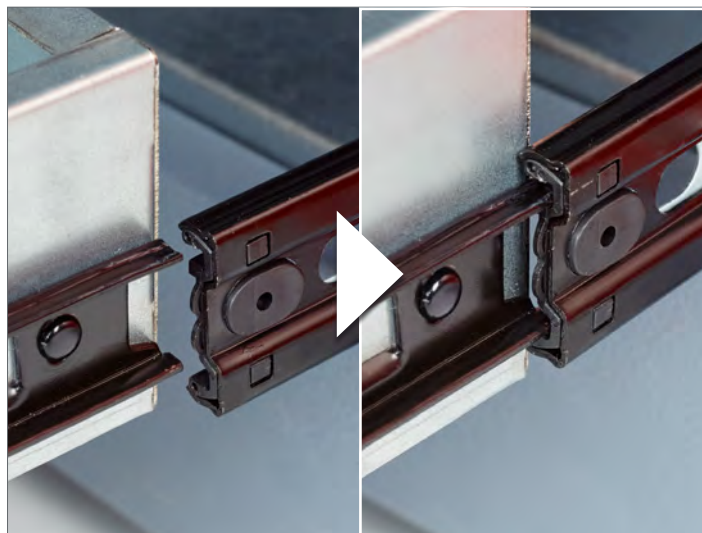


41.

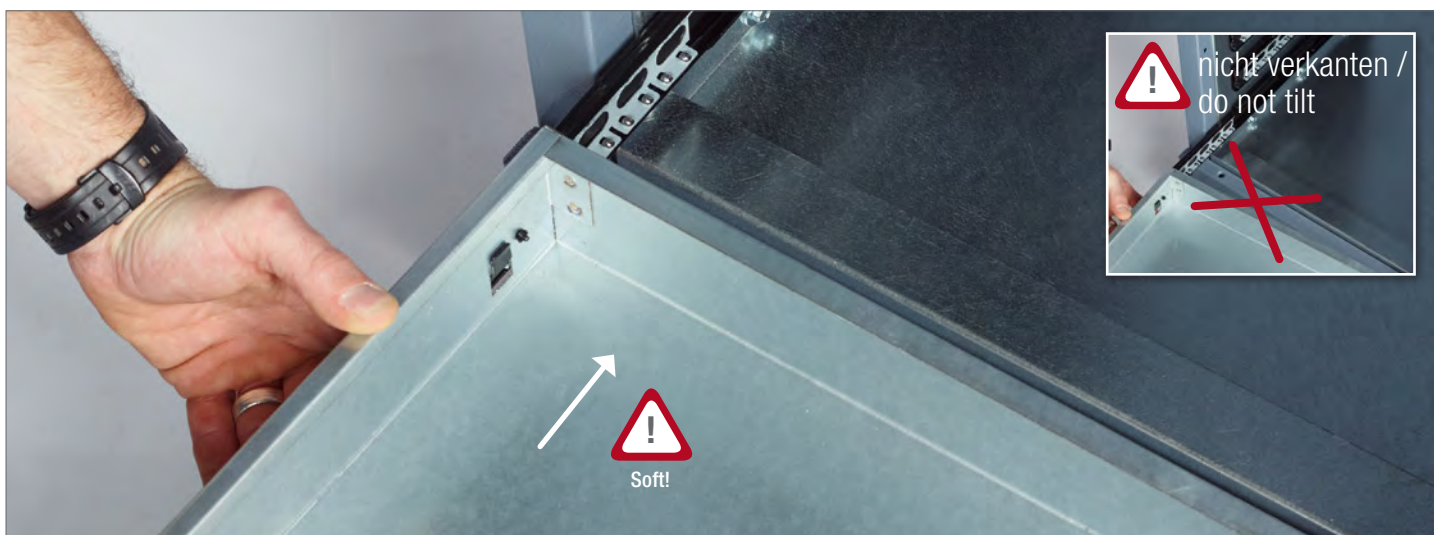

42.




43. SCHUBLADE ENTFERNEN / REMOVE DRAWER

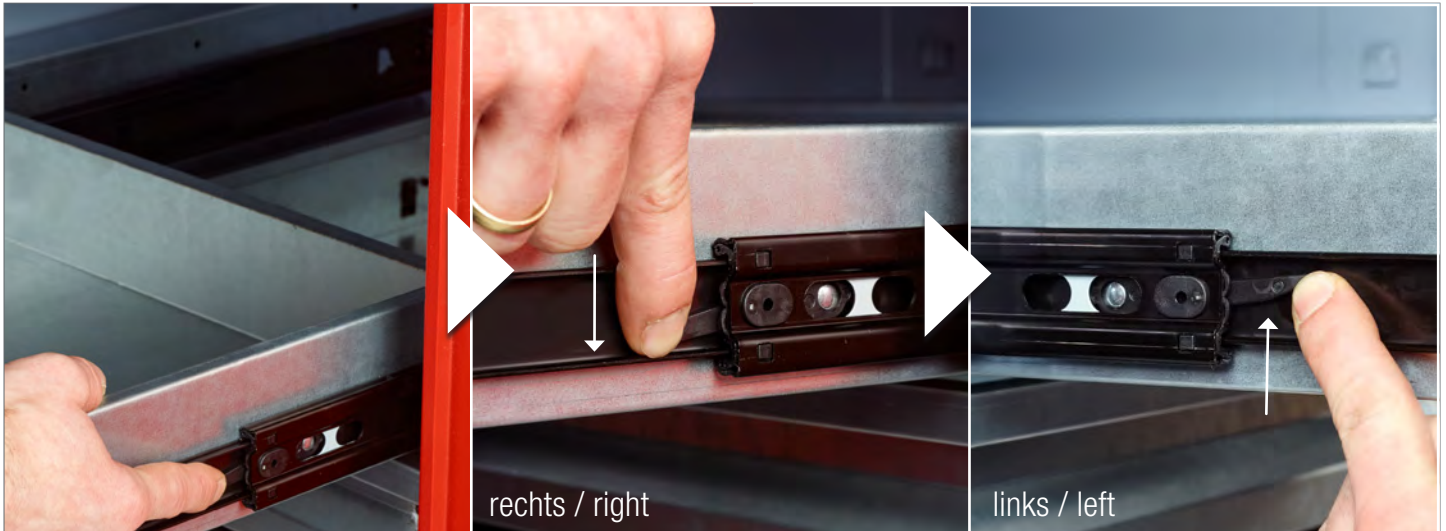

44.



A.

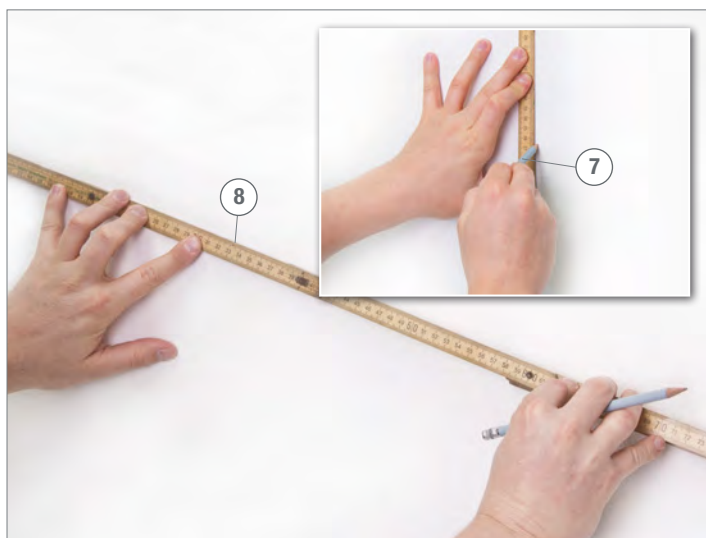

B.



C.



D.



Modell-Nr.

70690